

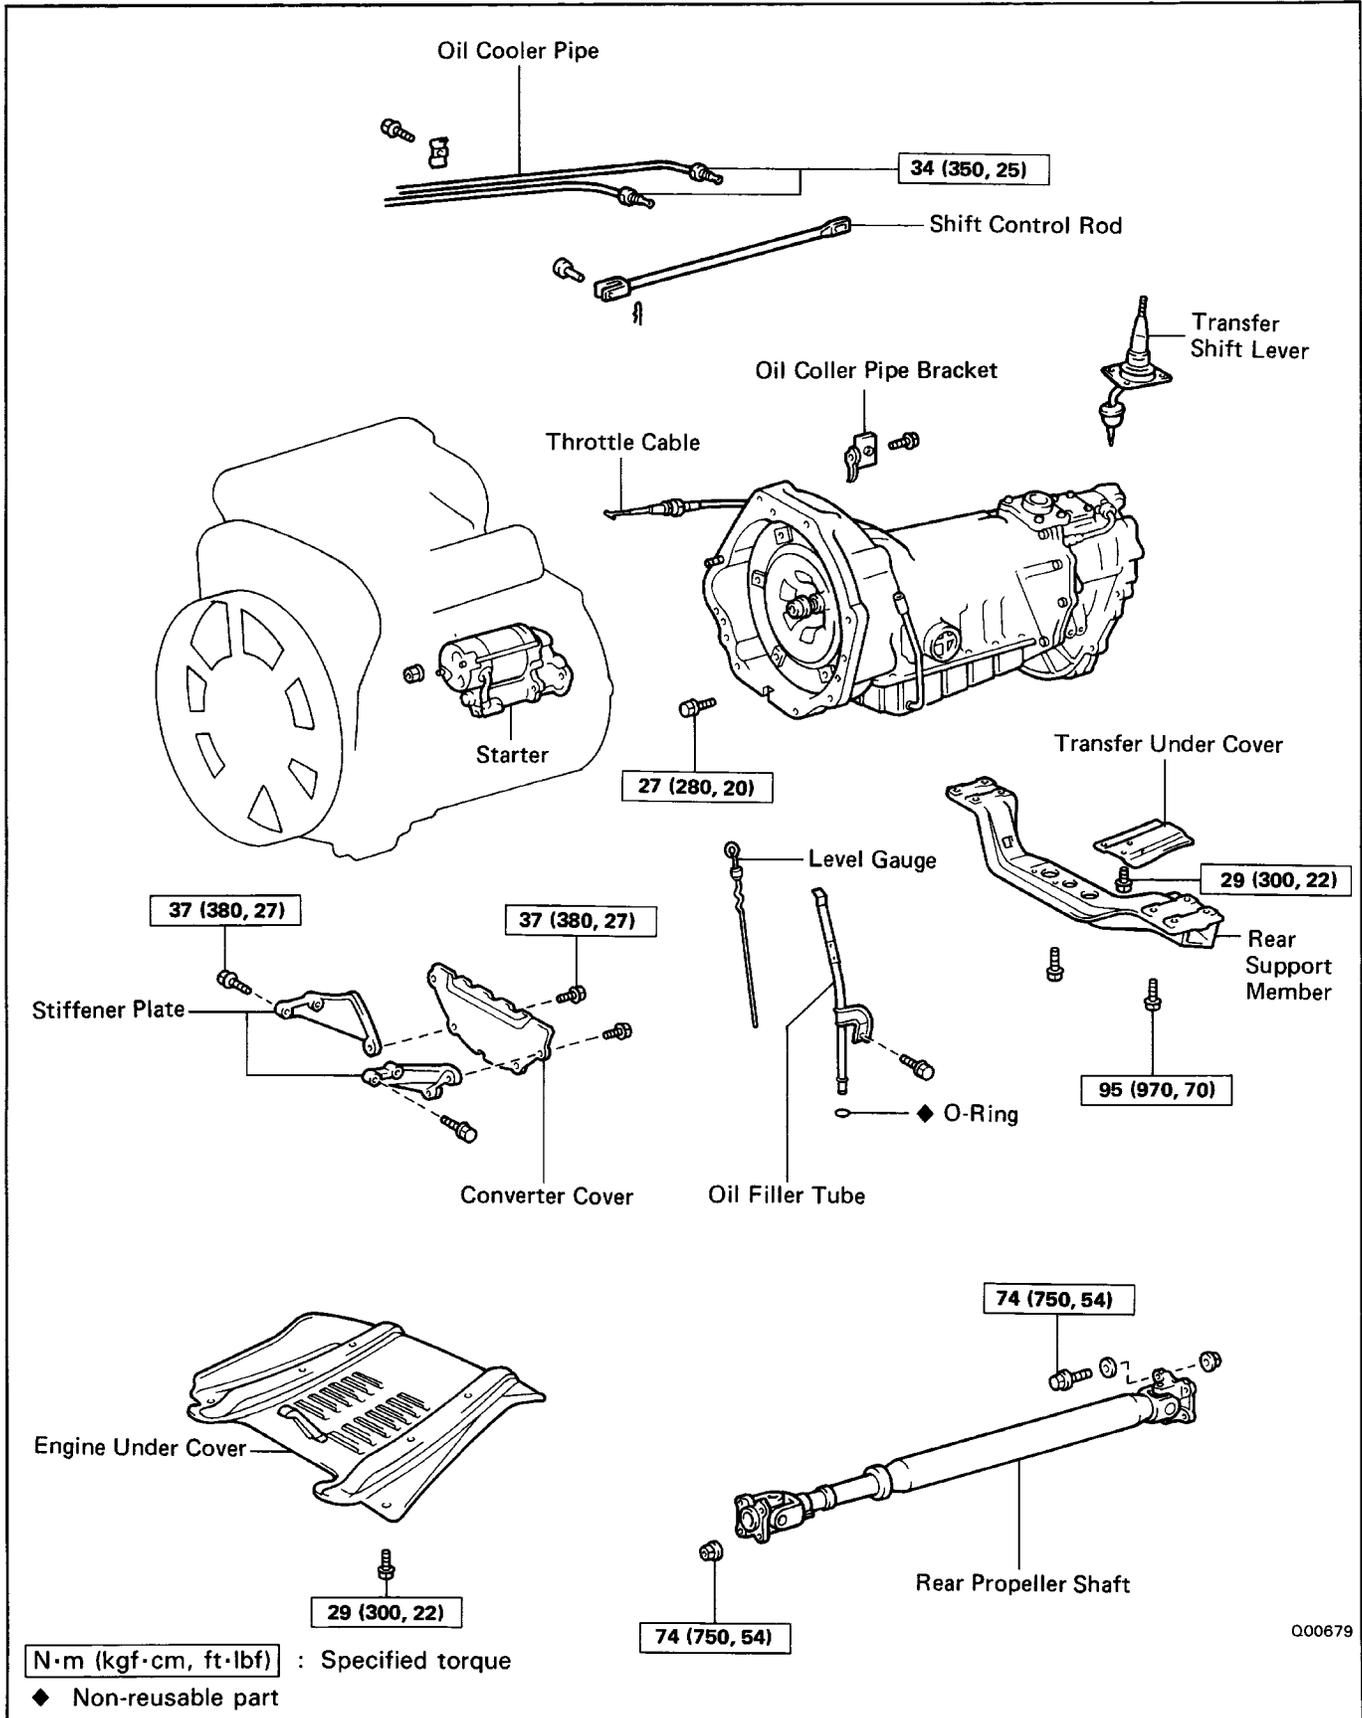


REMOVAL AND INSTALLATION OF TRANSMISSION

Remove and Install the parts as shown.

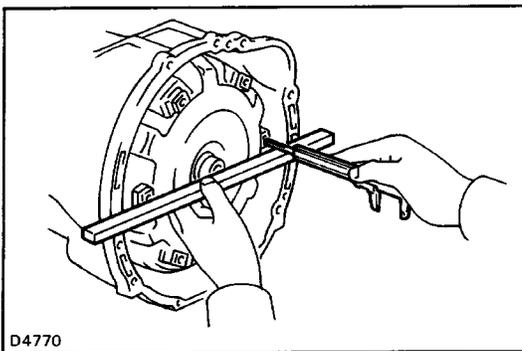

(Cont'd)

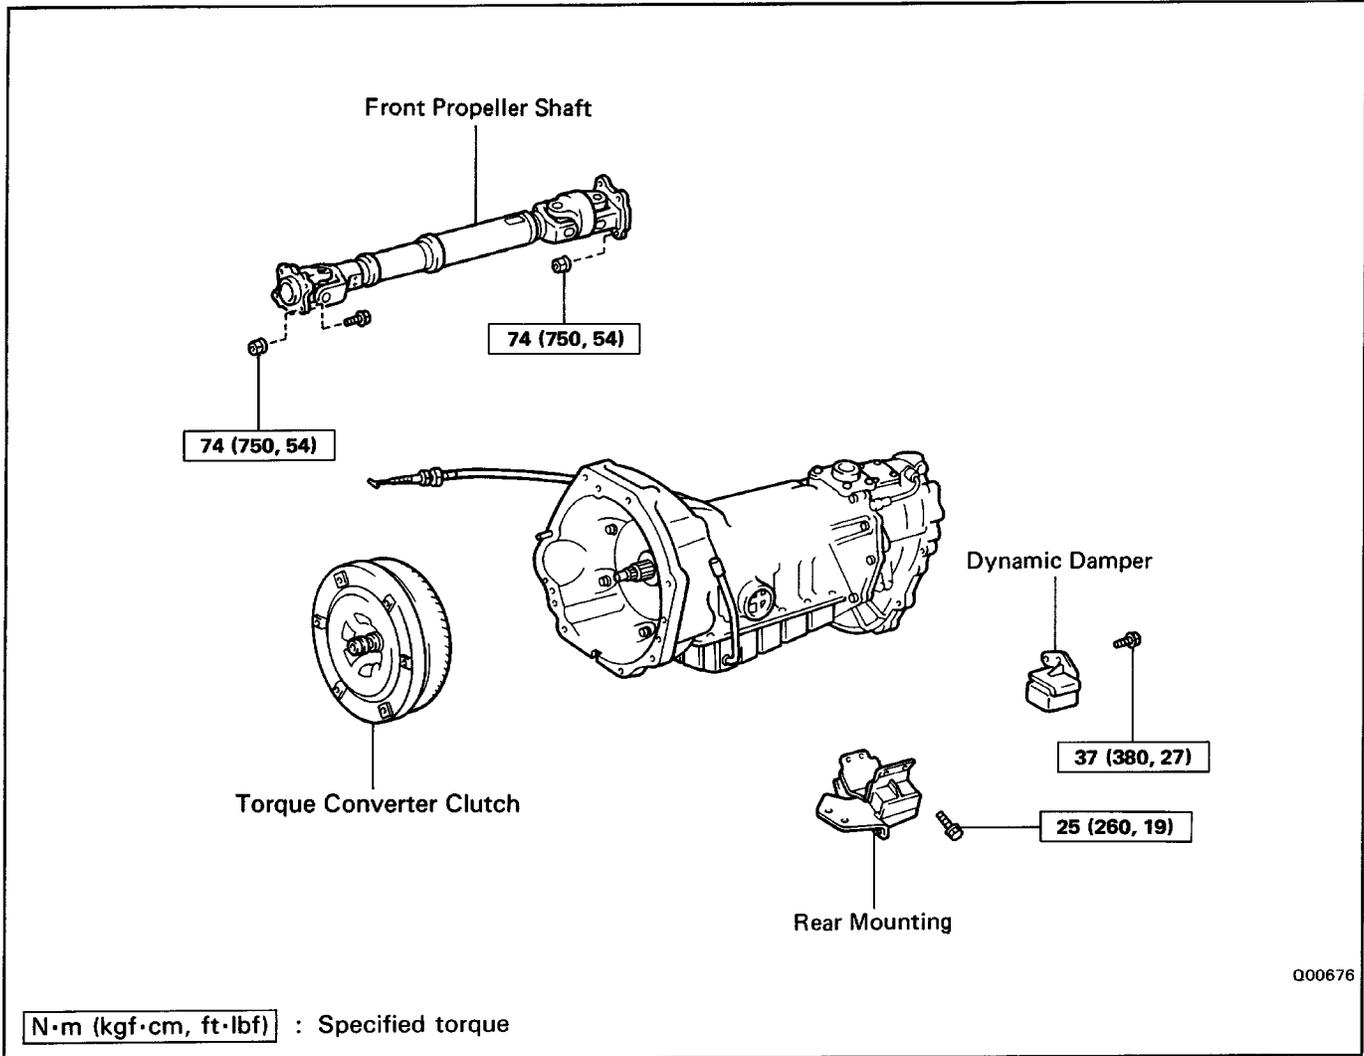

(MAIN POINT OF INSTALLATION)

1. CHECK TORQUE CONVERTER CLUTCH INSTALLATION

Using calipers and a straight edge, measure from the installed surface of the torque converter clutch to the front surface of the transmission housing.

Correct distance: 20.0 mm (0.787 in.)

If the distance is less than the standard, check for an improper installation.

2. ADJUST TRANSMISSION THROTTLE CABLE

(See page [AT-182](#))

3. FILL TRANSMISSION WITH ATF AND CHECK FLUID LEVEL

Fluid type: ATF DEXRON® II

NOTICE: Do not overfill.