
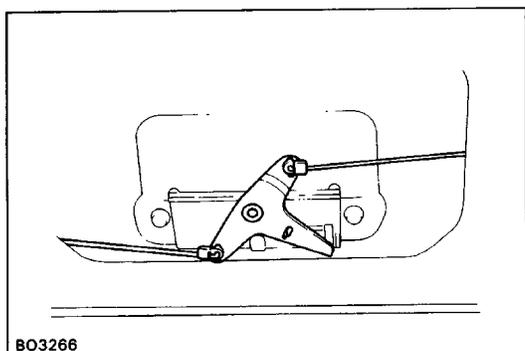


# ONE-TOUCH TAIL GATE COMPONENTS

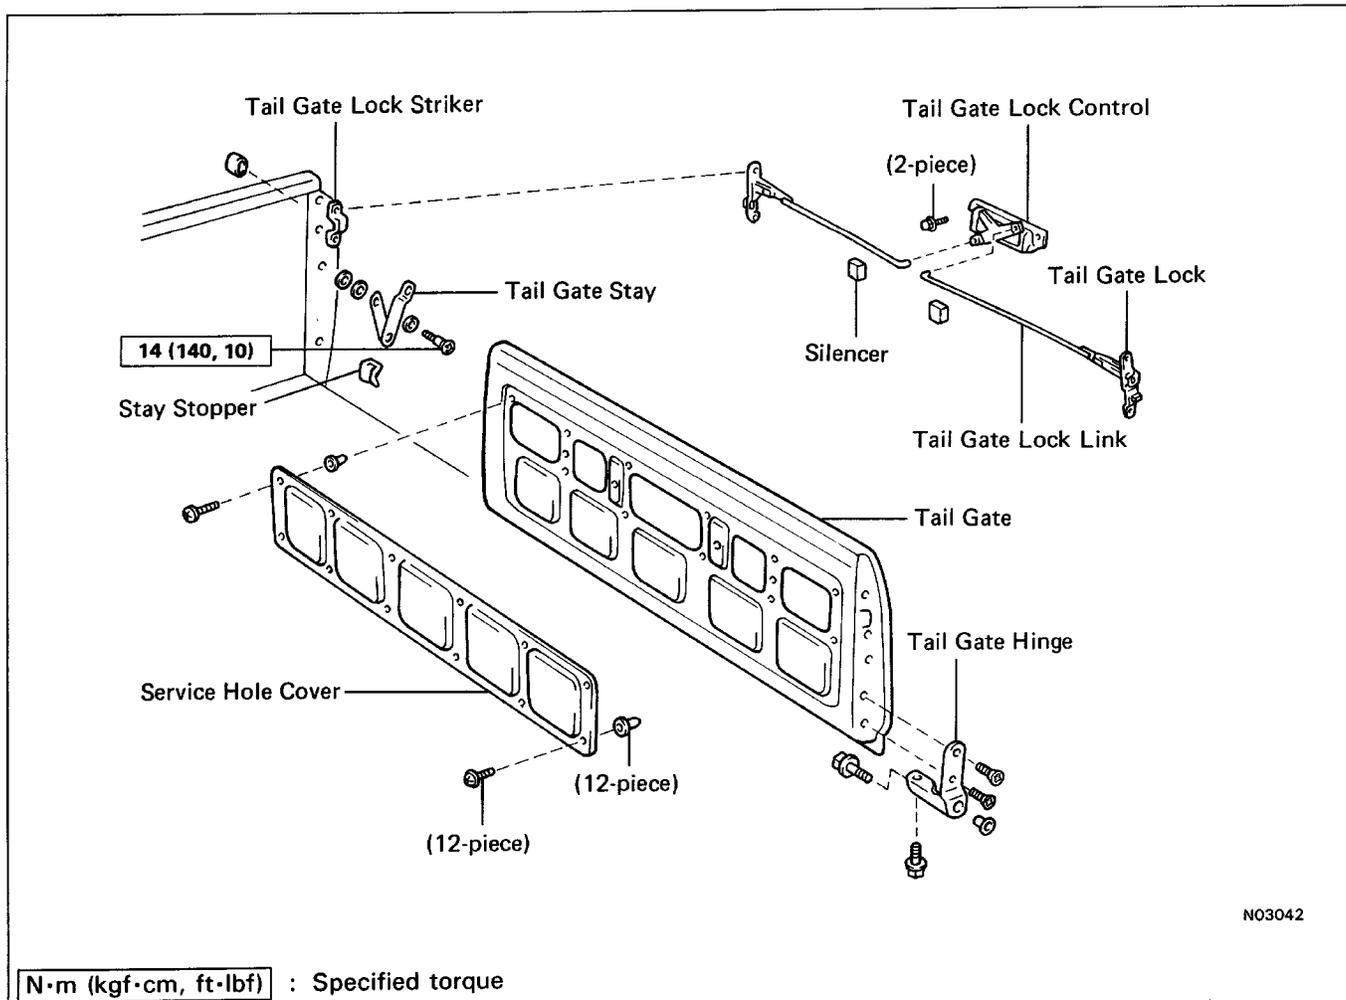


## REMOVAL OF TAIL GATE LOCK

### 1. REMOVE SERVICE HOLE COVER

Remove twelve screws and the service hole cover.

### 2. DISCONNECT TAIL GATE LOCK LINK FROM TAIL GATE LOCK CONTROL

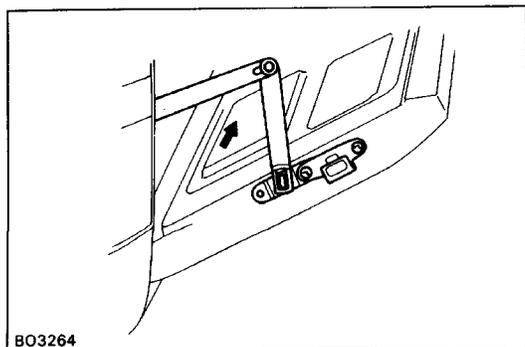


### 3. REMOVE TAIL GATE STAY

(a) Disconnect the tail gate stay from the tail gate.

(b) Remove the bolt and the tail gate stay from the body.

### 4. REMOVE TAIL GATE LOCK FROM TAIL GATE

Remove two screws and the tail gate lock.

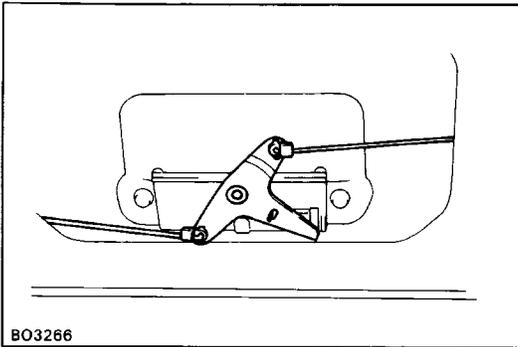

## INSTALLATION OF TAIL GATE LOCK

### 1. INSTALL TAIL GATE LOCK TO TAIL GATE

Install the tail gate lock with the two screws.

### 2. INSTALL TAIL GATE STAY

(a) Install the tail gate stay and the bolt.



**Torque: 14 N-m (140 kgf-cm, 10 ft-lbf)**

(b) Connect the tail gate stay to the tail gate.

### 3. CONNECT TAIL GATE STAY TO TAIL GATE

### 4. INSTALL SERVICE HOLE COVER

Install service hole cover with twelve screws.

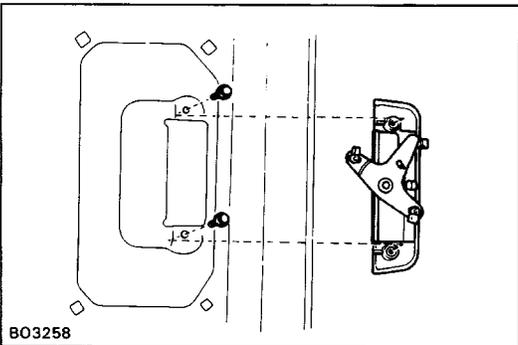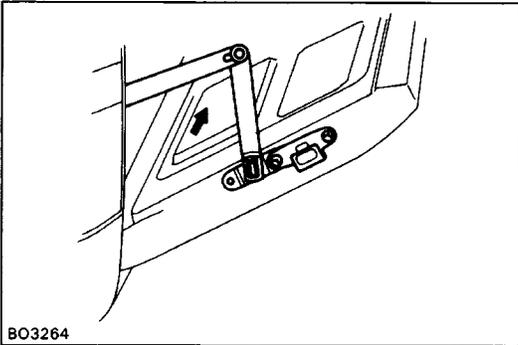

## REMOVAL OF TAIL GATE LOCK CONTROL

### 1. REMOVE SERVICE HOLE COVER

### 2. DISCONNECT TWO TAIL GATE LOCK LINKS

### 3. REMOVE TAIL GATE LOCK CONTROL

## INSTALLATION OF TAIL GATE LOCK CONTROL

INSTALL TAIL GATE LOCK CONTROL IN REVERSE ORDER OF REMOVAL