



SEAT BELT

Front Seat Belt COMPONENTS

Separate Seat

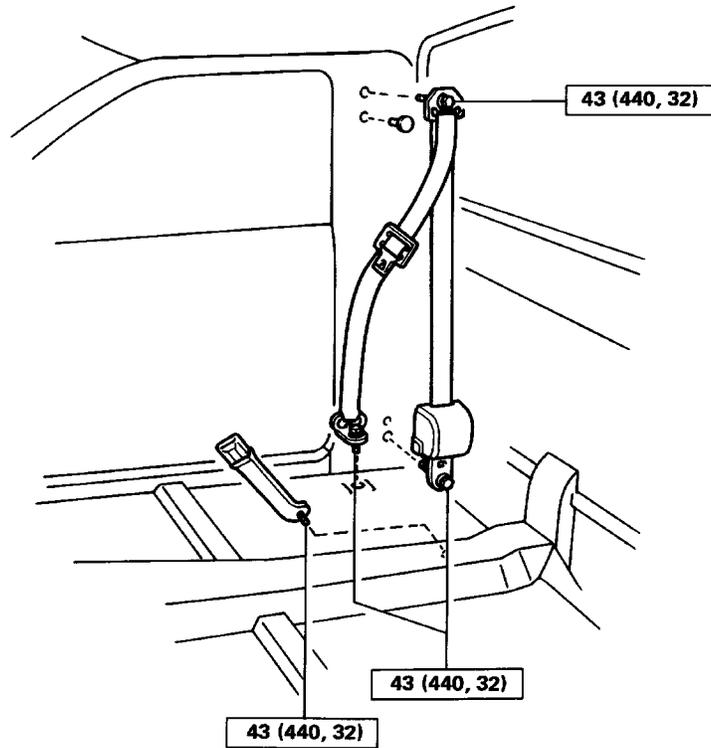

Sprit Bench Seat and Bench Seat

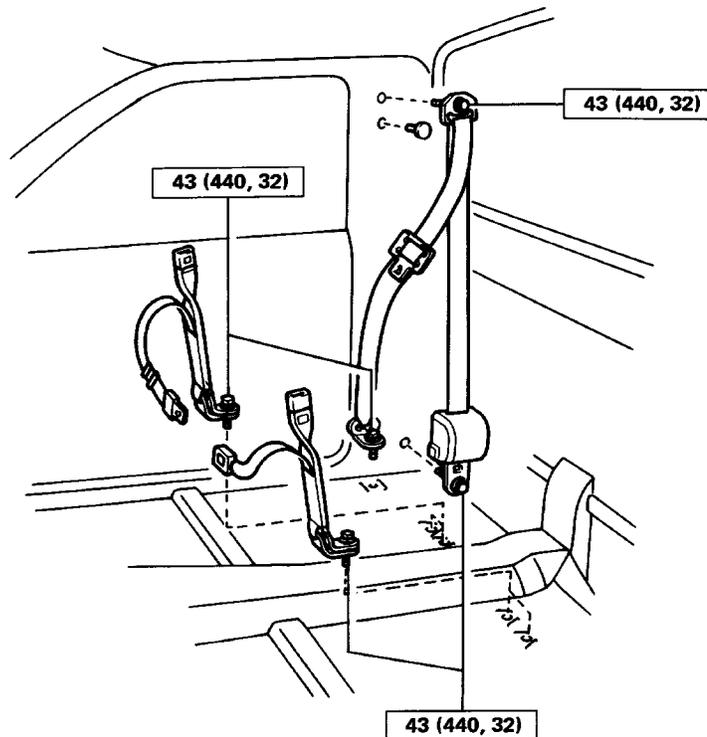


B03275
B03274

N·m (kgf·cm, ft·lbf) : Specified torque


Rear Jump Seat Belt COMPONENTS (Cont'd)

Xtra Cab

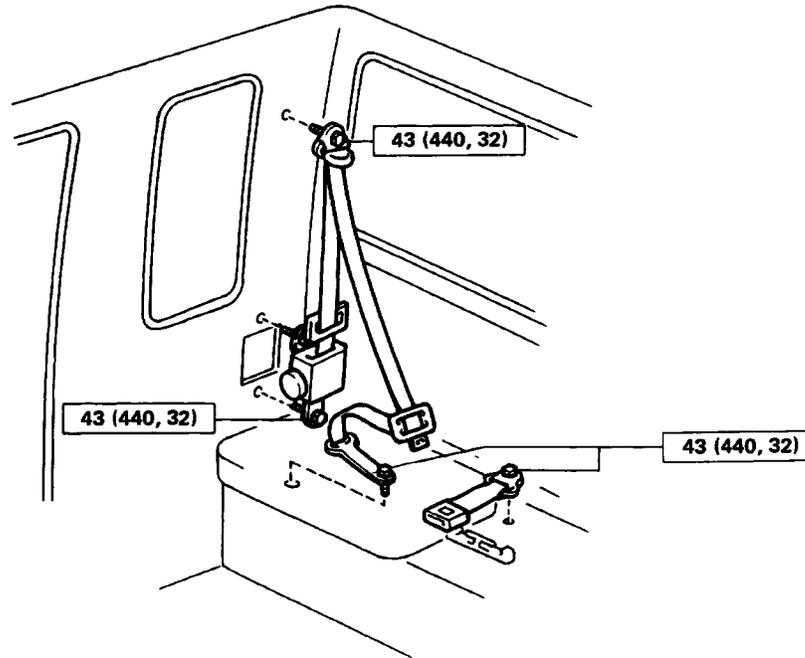

B03277

N·m (kgf·cm, ft·lbf) : Specified torque

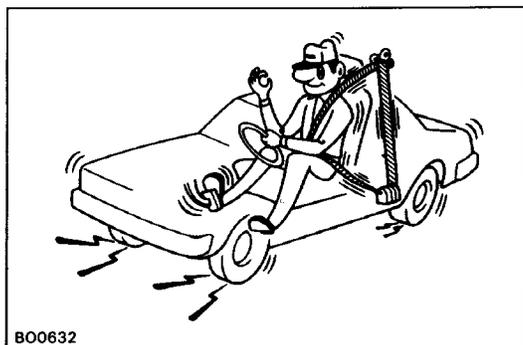

SEAT BELT

[Emergency Locking Retractor (ELR) Type]

1. RUNNING TEST (IN SAFETY AREA)


- (a) Fasten the seat belt.
- (b) Drive the car at 10 mph (16 km/h) and make a very hard stop.
- (c) Check that the seat belt is locked and cannot be extended at this time.

HINT: Conduct this test in safe area. If the belt does not lock, remove the belt mechanism assembly and conduct the following static check. Also, whenever installing a new belt assembly, verify the proper operation before installation.

2. STATIC TEST

- (a) Remove the locking retractor assembly.
- (b) Tilt the retractor slowly.
- (e) Verify that the belt can be pulled out at a tilt of 15 degrees or less, and cannot be pulled out at over 45 degrees of tilt.

If a problem is found, replace the assembly.

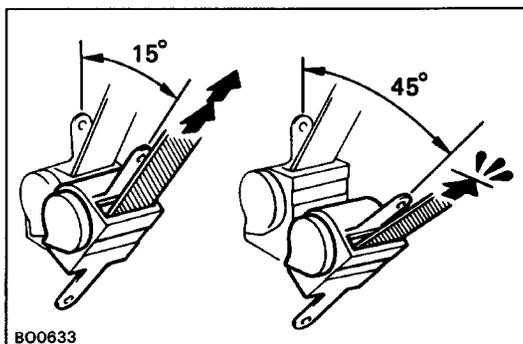

CENTER SEAT BELT

(Manual Type)

TESTING

- (a) Adjust the belt to the proper length.
- (b) Apply a firm load to the belt.
- (c) Verify that the belt does not extend.

