

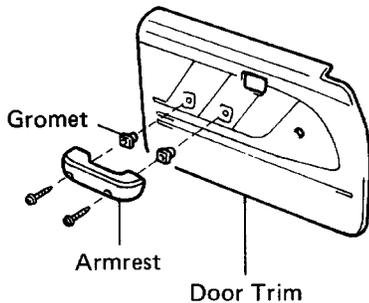


FRONT DOOR COMPONENTS


w/o Ventilator Window Type

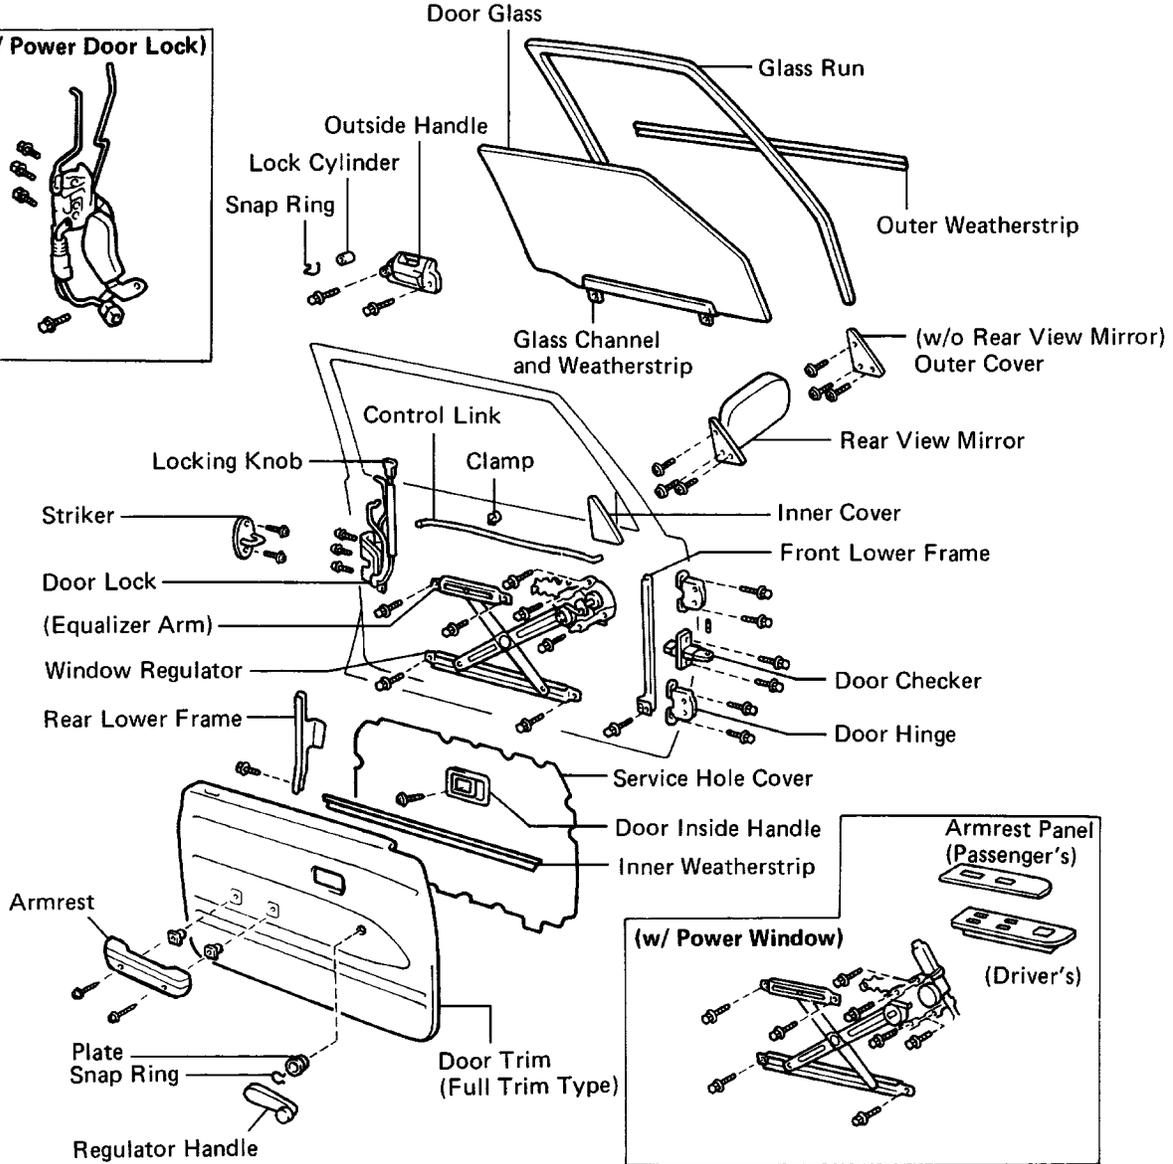

Semi Trim Type

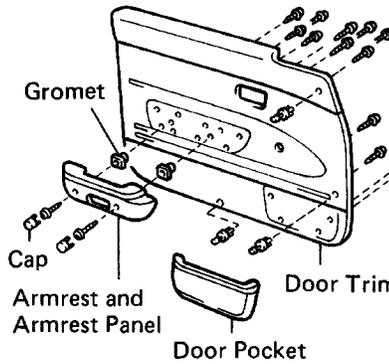




w/ Wide Armrest

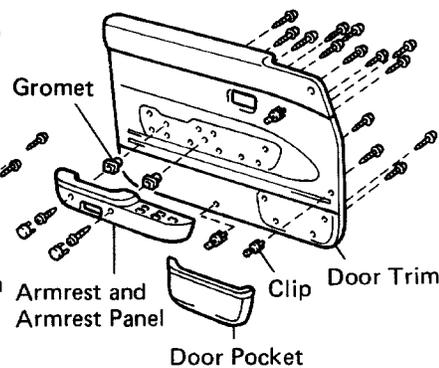


w/ Power Window

COMPONENTS (Cont'd)


w/ Ventilator Window Type

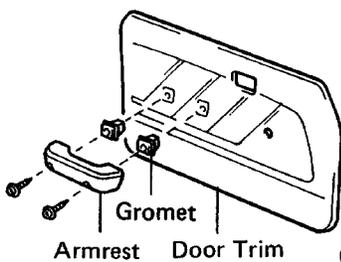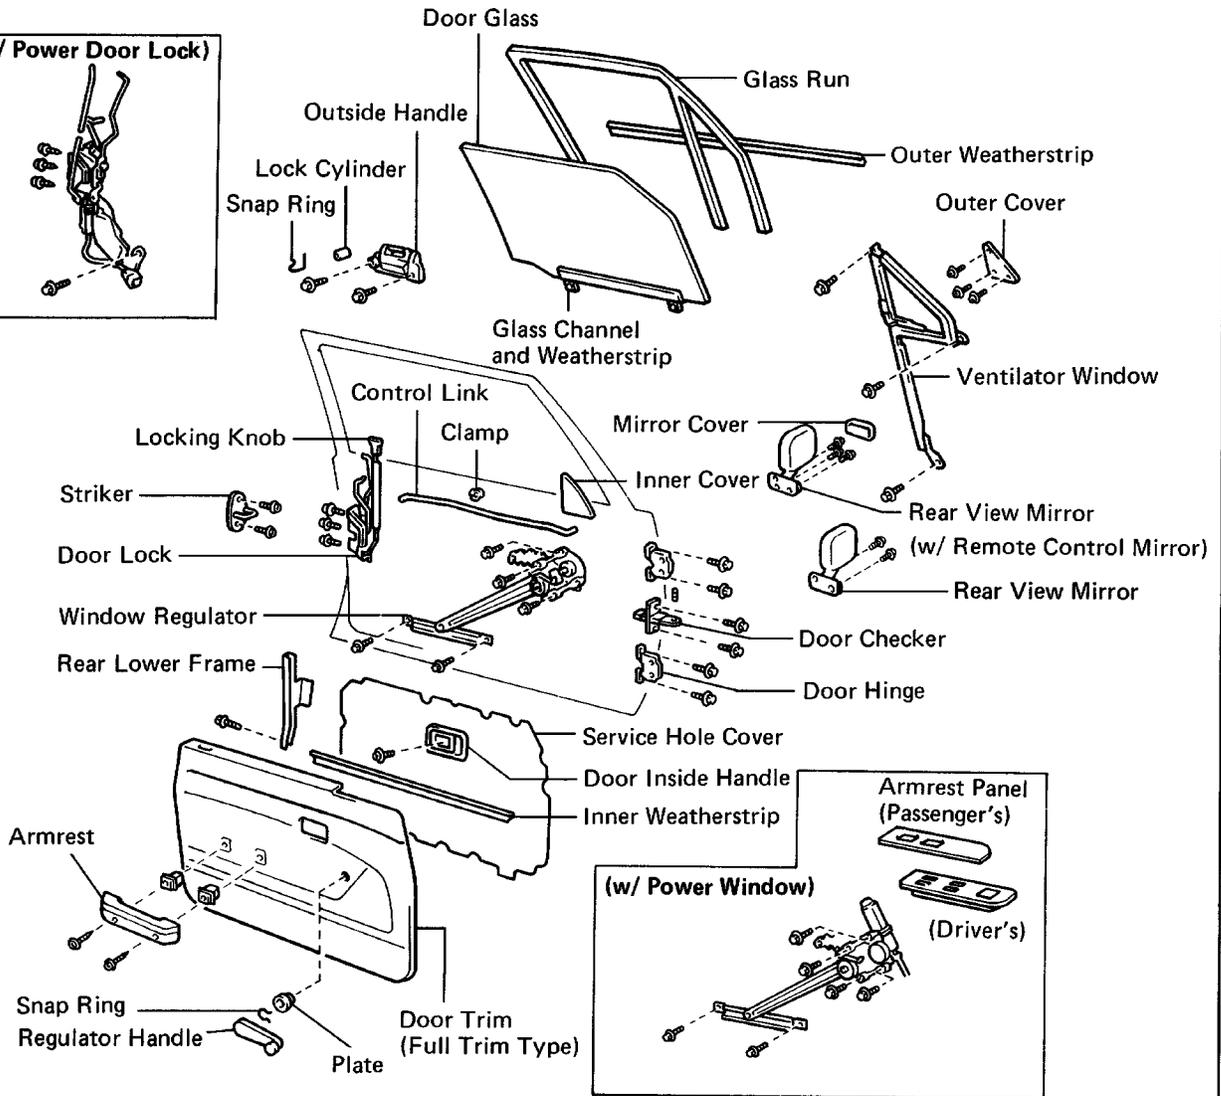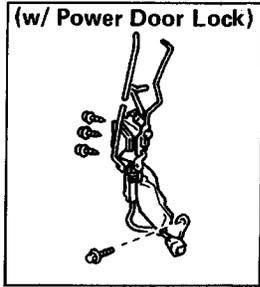


Semi Trim Type

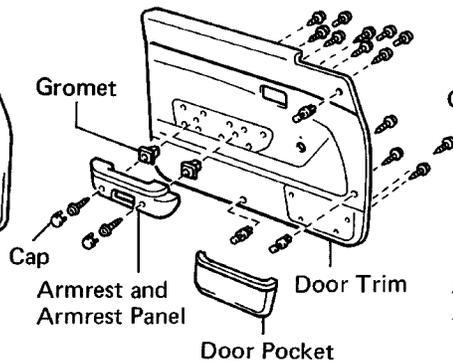

w/ Wide Armrest

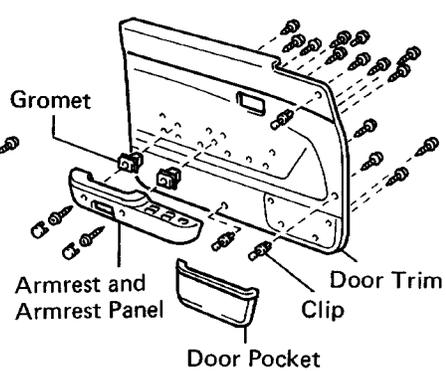

w/ Power Window

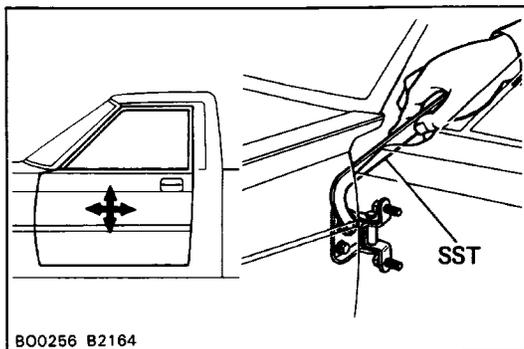


ADJUSTMENT OF FRONT DOOR

1. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS


Using SST, adjust the door by loosening the body side hinge bolts.

SST 09812-00010

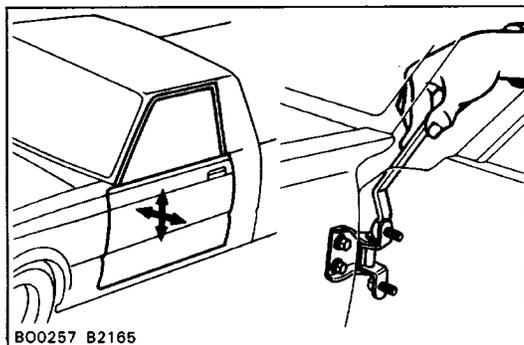


2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust.

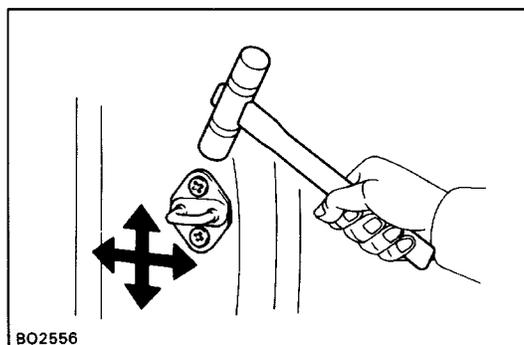

3. ADJUST DOOR LOCK STRIKER

- Check that the door fit and door lock linkages are adjusted correctly.
- Adjust the striker position by slightly loosening the striker mounting screws, and hitting the striker with a hammer.
- Tighten the striker mounting screws again.

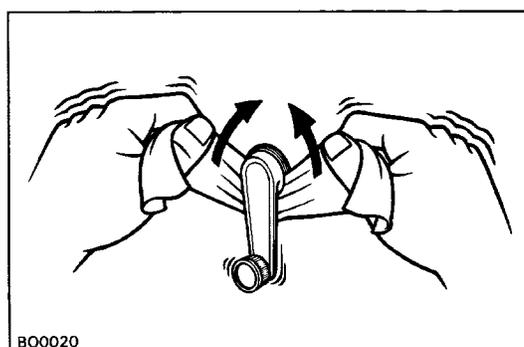

DISASSEMBLY OF FRONT DOOR

(See pages [BO-4](#) and [5](#))

1. (w/o Power Window)

REMOVE REGULATOR HANDLE

Pull off the snap ring with a cloth and remove the regulator handle and plate.

2. REMOVE DOOR INSIDE HANDLE


- Remove the screw and slide the handle forward.
- Disconnect the handle from the control link and remove the handle.


3. REMOVE INNER AND OUTER COVERS

- Using a screwdriver, pry loose a clip and remove the inner cover.

HINT: Tape the screwdriver tip before use.

- (w/ Ventilator Window or w/o Rear View Mirror)
Remove three screws and the outer cover.

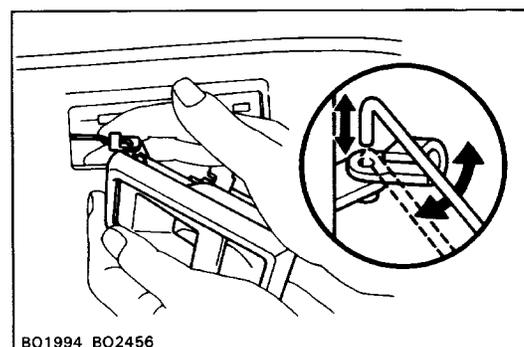

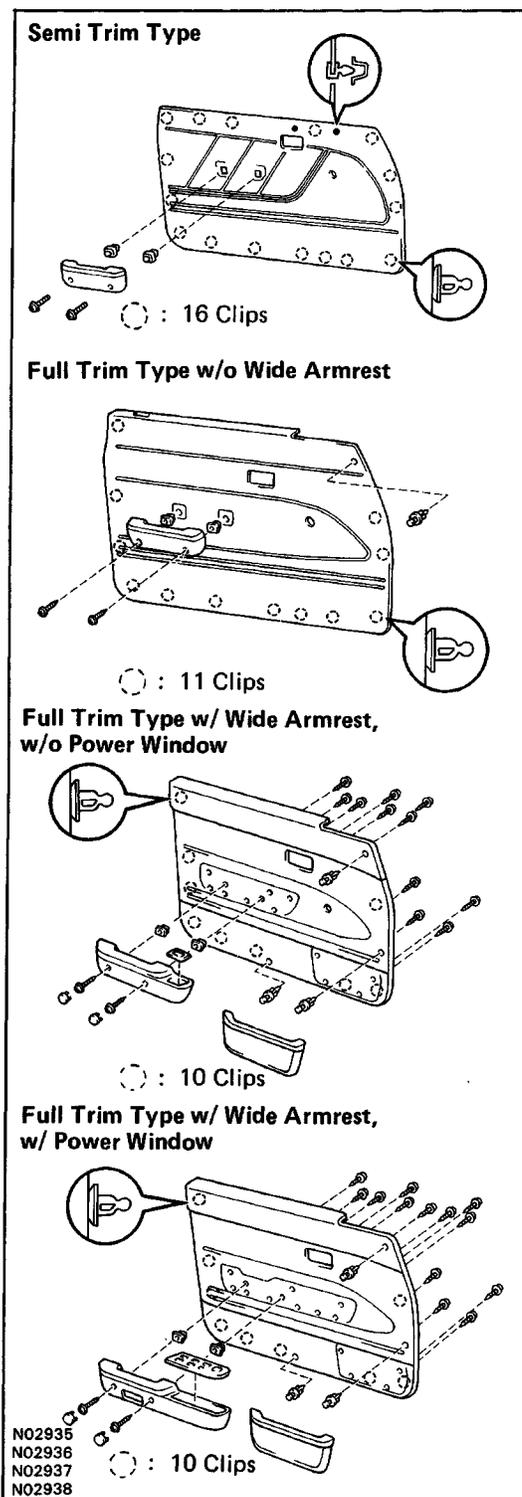

4. REMOVE REAR VIEW MIRROR (w/o Ventilator Window)

- (a) (w/Remote Control Mirror)
Disconnect the connector.
- (b) Remove three screws and the mirror.

(w/ Ventilator Window)

- (a) (w/ Remote Control Mirror)
Disconnect the connector.
- (b) (w/o Remote Control Mirror)
Remove the mirror cover, two screws and the mirror.
(w/ Remote Control Mirror)
Remove the mirror cover, three screws and the mirror.

5. REMOVE DOOR TRIM

- (a) (w/ Wide Armrest)
Remove two caps from the armrest.
- (b) (w/ Wide Armrest)
Remove two screws from the armrest.
(Semi Trim Type and Full Trim Type, w/ Wide Armrest)
Remove two screws and the armrest.
- (c) (w/ Power Window)
Remove the armrest panel by pulling upward, then disconnect the connectors.
- (d) (w/ Wide Armrest)
Remove three clips.
(Full Trim Type, w/o Wide Armrest)
Remove the clip.
- (e) Install the screwdriver between the retainers and door trim to pry it loose.

HINT: Tape the screwdriver tip before use.


- (f) Remove the door trim.
- (g) (w/ Power Window)
Remove nine screws and the armrest.
(w/ Wide armrest, w/o Power Window)
Remove seven screws and the armrest.
- (h) (w/ Wide Armrest)
Remove four screws and the door pocket.
- (i) (Full Trim Type)
Remove the inner weatherstrip from the door trim.


6. REMOVE SERVICE HOLE COVER

7-1. (w/ Ventilator Window)

REMOVE VENTILATOR WINDOW

- (a) Remove the bolt and two screws.
- (b) Remove the ventilator window by pulling it upward.

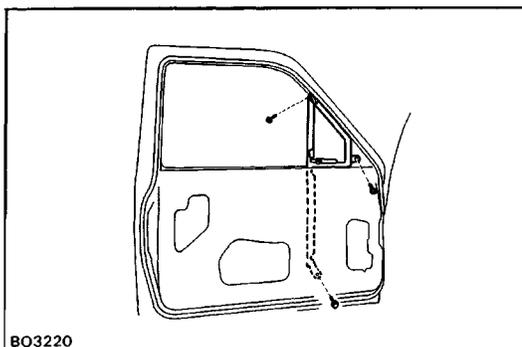


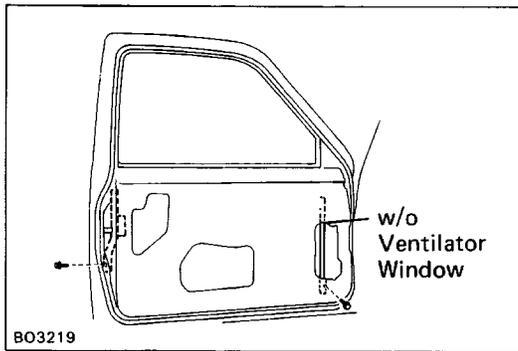**7-2. (w/o Ventilator Window)****REMOVE FRONT LOWER FRAME**

Remove the bolt and the frame.

8. REMOVE REAR LOWER FRAME


Remove the bolt and the frame.

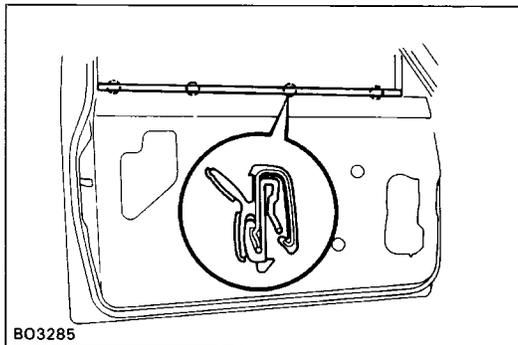**9-1. (Semi Trim type)****REMOVE INNER AND OUTER WEATHERSTRIP**

Pry loose the clips from the edge of the panel and remove the weatherstrip.

9-2. (Full Trim type)**REMOVE OUTER WEATHERSTRIP**

In the same manner, remove the outer weatherstrip.

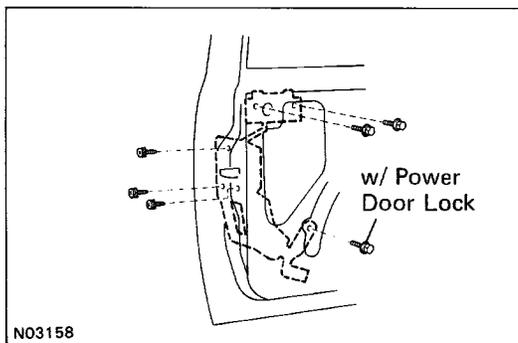10. REMOVE GLASS RUN**11. REMOVE INSIDE LOCKING KNOB**

Disconnect the link and remove the inside locking knob.

12. REMOVE OUTSIDE HANDLE WITH LOCK CYLINDER AND DOOR LOCK

(a) Disconnect the links from the outside handle with the lock cylinder.

(b) (w/Power Door Lock)

Disconnect the connectors, remove three screws, the bolt and the door lock with the motor.

(w/o Power Door Lock)

Remove three screws and the door lock.


(c) Remove two bolts and the outside handle with lock cylinder.

(d) Remove the snap ring and the lock cylinder.

13. REMOVE DOOR GLASS AND WINDOW REGULATOR

(a) Remove two glass channel mounting bolts.

(b) Place the glass in the door cavity.

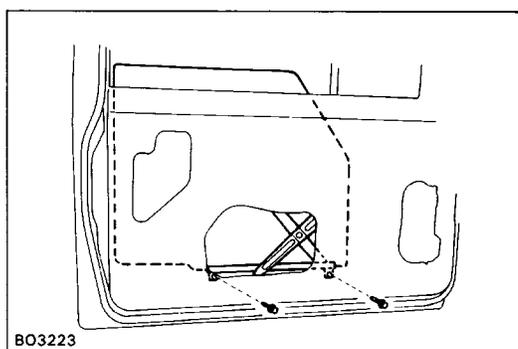

(c) (w/o Ventilator Window)

Remove two equalizer arm bracket mounting bolts.

(d) (w/ Power Window)


Disconnect the connectors, then remove four regulator mounting bolts.


(w/o Power Window)

Remove three regulator mounting bolts.

(e) Remove the regulator through the service hole.

(f) Remove the glass by pulling it upward.

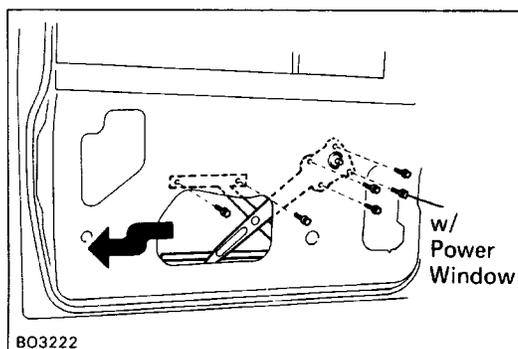

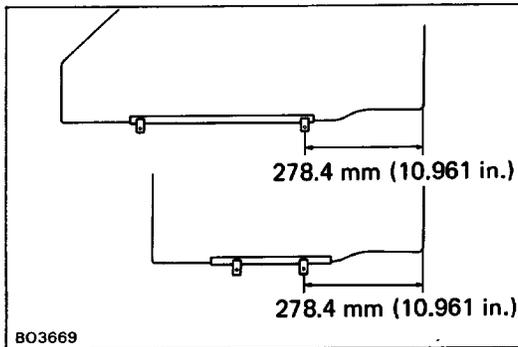

REPLACEMENT OF GLASS

1. REMOVE GLASS CHANNEL WITH SCREWDRIVER OR LIKE OBJECT
2. APPLY SOAPY WATER TO INSIDE OF WEATHER-STRIP
3. INSTALL CHANNEL BY TAPPING IT WITH PLASTIC HAMMER

ASSEMBLY OF FRONT DOOR



(See pages [BO-4](#) and 5)

1. BEFORE INSTALLING PARTS, COAT THEM WITH MP GREASE

(a) Apply MP grease to the sliding surface and the gears of the window regulator.

NOTICE: Do not apply MP grease to the spring of the window regulator.

(b) Apply MP grease to the sliding surface of the door lock.

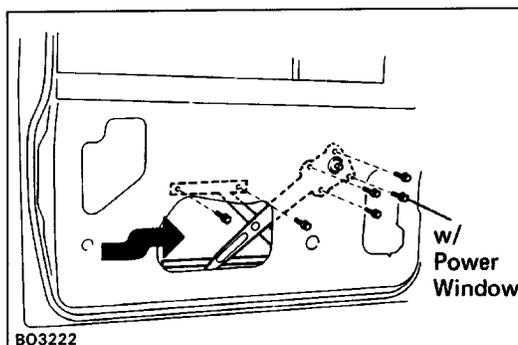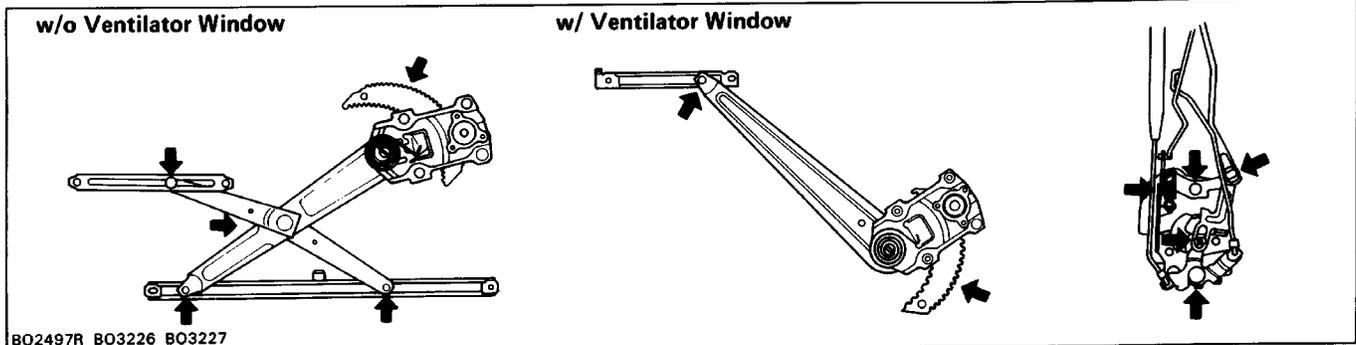

2. INSTALL WINDOW REGULATOR AND DOOR GLASS

(a) Place the glass in the door cavity.

(b) Place the regulator through the service hole.

(c) (w/ Power Window)

Install the four regulator mounting bolts, then connect the connector.


(w/o Power Window)


Install the three regulator mounting bolts.

(d) (w/o Ventilator Window)

Install the equalizer arm and temporarily tighten two equalizer arm mounting bolts.


(e) Attach the glass to the window regulator with two bolts.

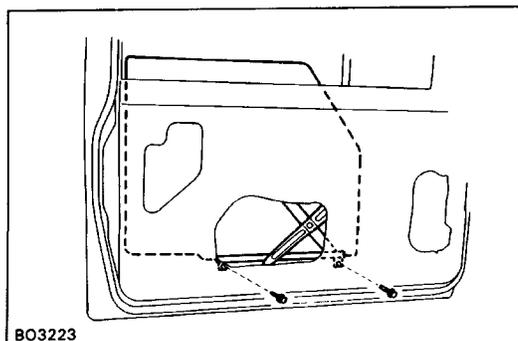

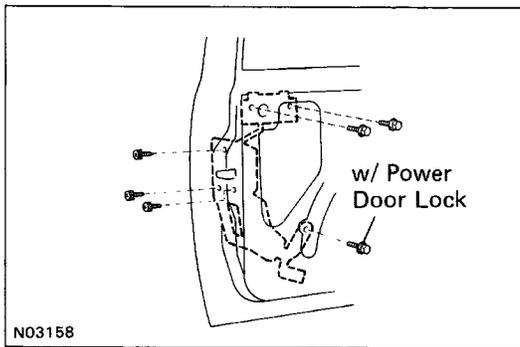

3. INSTALL OUTSIDE HANDLE WITH LOCK CYLINDER AND DOOR LOCK

- Install the lock cylinder with the snap ring to the outside handle.
- Install the outside handle and lock cylinder with two bolts.
- (w/Power Door Lock)
Install the door lock and motor with three screws and the bolt, then connect the connector.
(w/o Power Door Lock)
Install the door lock with three screws.
- Connect the links to the outside handle.

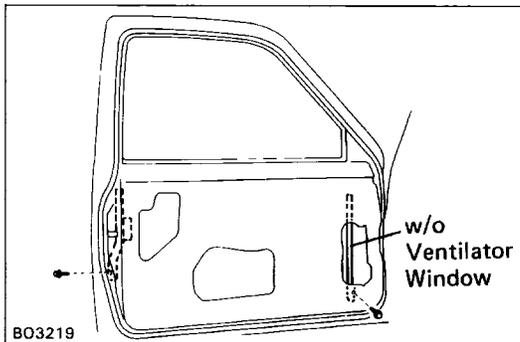

4. INSTALL INSIDE LOCKING KNOB

Install the locking knob and connect the control links.

5. INSTALL GLASS RUN

6. INSTALL REAR LOWER FRAME


7-1. (w/o Ventilator Window)

INSTALL FRONT LOWER FRAME

7-2. (w/Ventilator Window)

INSTALL VENTILATOR WINDOW

- Install the ventilator window.
- Install the bolt and two screws.

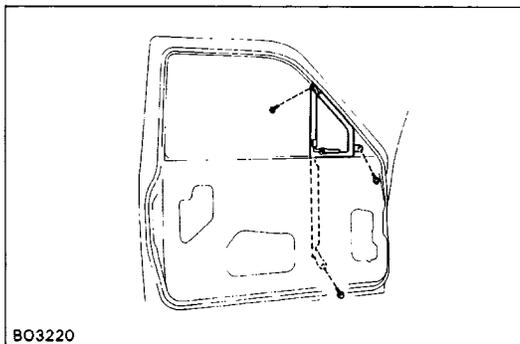


8. (w/o Ventilator Window)

ADJUST DOOR GLASS

Adjust the equalizer arm up or down and tighten if where dimensions A and B, as shown are equal.


9. INSTALL REAR VIEW MIRROR


10. INSTALL INNER AND OUTER COVERS

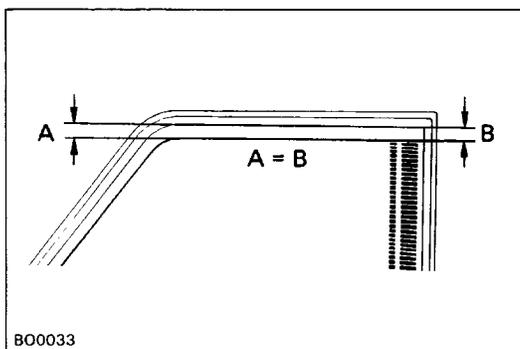

11. INSTALL SERVICE HOLE COVER

- Seal the service hole cover with adhesive.
- Install the lower edge of the service hole cover into the panel slit.

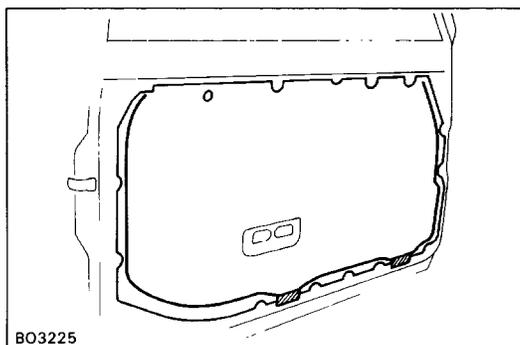

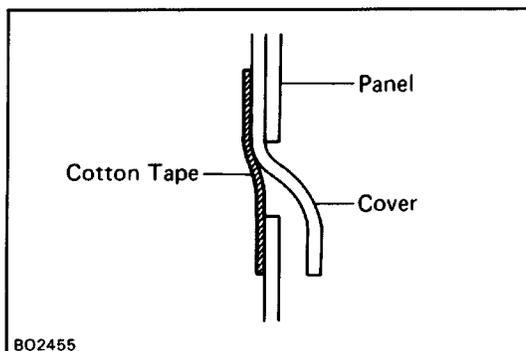

(c) Seal the panel slit with the cotton tape.

NOTICE: Do not block the trim clip seating with the tape.

12-1.(Semi Trim type)

INSTALL OUTER AND INNER WEATHERSTRIP

Install the claw of the clips into the upper panel slit and push the weatherstrip onto the panel.

12-2.(Full Trim type)

INSTALL OUTER WEATHERSTRIP

In the same manner, install the outer weatherstrip.

13. INSTALL THE DOOR TRIM

(a) (Full Trim Type)

Install the inner weatherstrip to the door trim.

(b) (w/ Wide Armrest)

Install the door pocket with four screws to the door trim.

(c) (w/Power Window)

Install the armrest with nine screws to the door trim.

(w/ Wide Armrest, w/o Power Window)

Install the armrest with seven screws to the door trim.

(d) Install the door trim with retainers to the inside panel by tapping.

(e) (w/ Power Window)

Connect the connectors and install the armrest panel.

(f) (w/ Wide Armrest)

Install three clips.

(Full Trim Type, w/o Wide Armrest)

Install the clip.

(g) (w/ Wide Armrest)


Install two screws to the armrest.


(Semi Trim Type and Full Trim Type, w/ Wide Armrest)

Install the armrest with two screws.

(h) (w/ Wide Armrest)

Install two caps to the armrest.

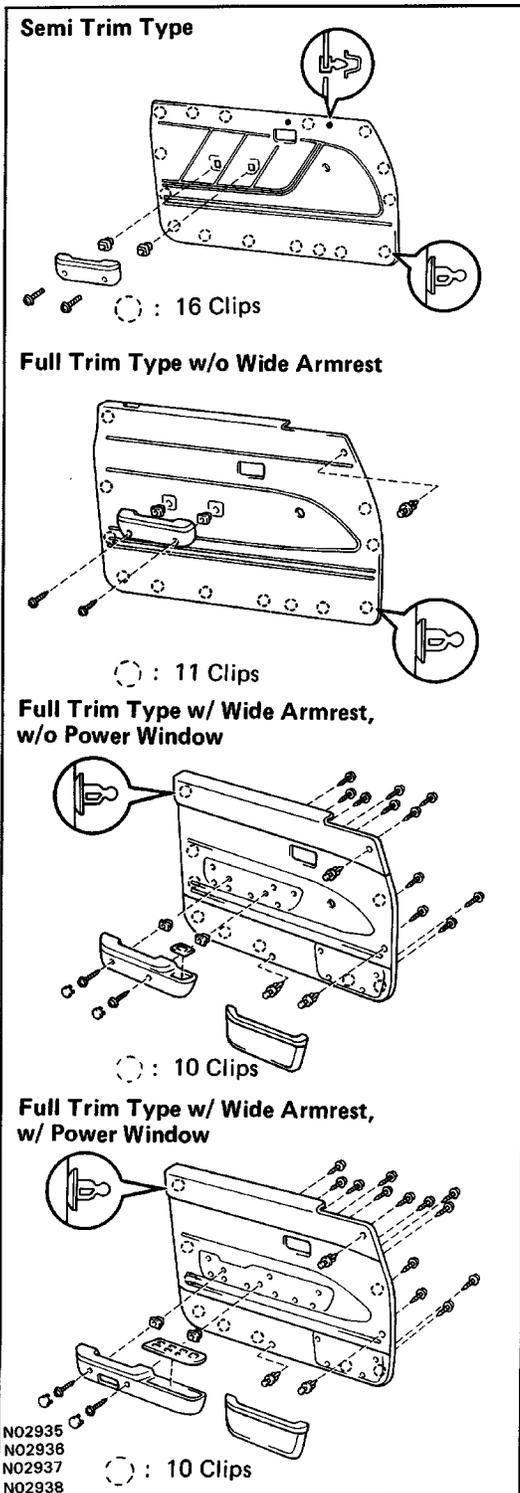

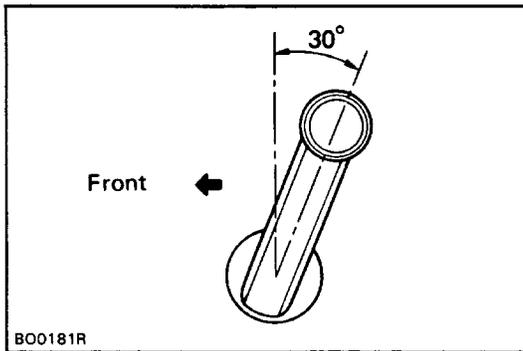**14. INSTALL DOOR INSIDE HANDLE**

(See step 2 on page [BO-6](#))

- (a) Connect the handle to the control links.
- (b) Push the inside handle in the door panel and slide it rearward.
- (c) Install the screw.

15. (w/o Power Window)**INSTALL REGULATOR HANDLE**

With door window fully closed, install the plate and the regulator handle with the snap ring as shown.