
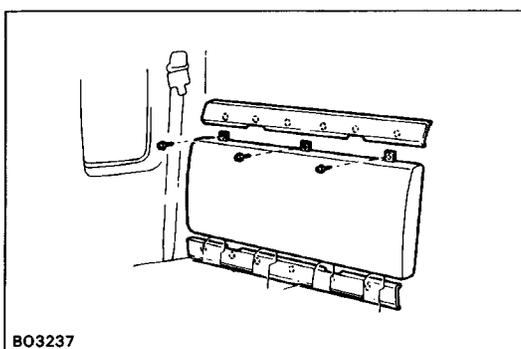



# QUARTER WINDOW (Xtra Cab) COMPONENTS

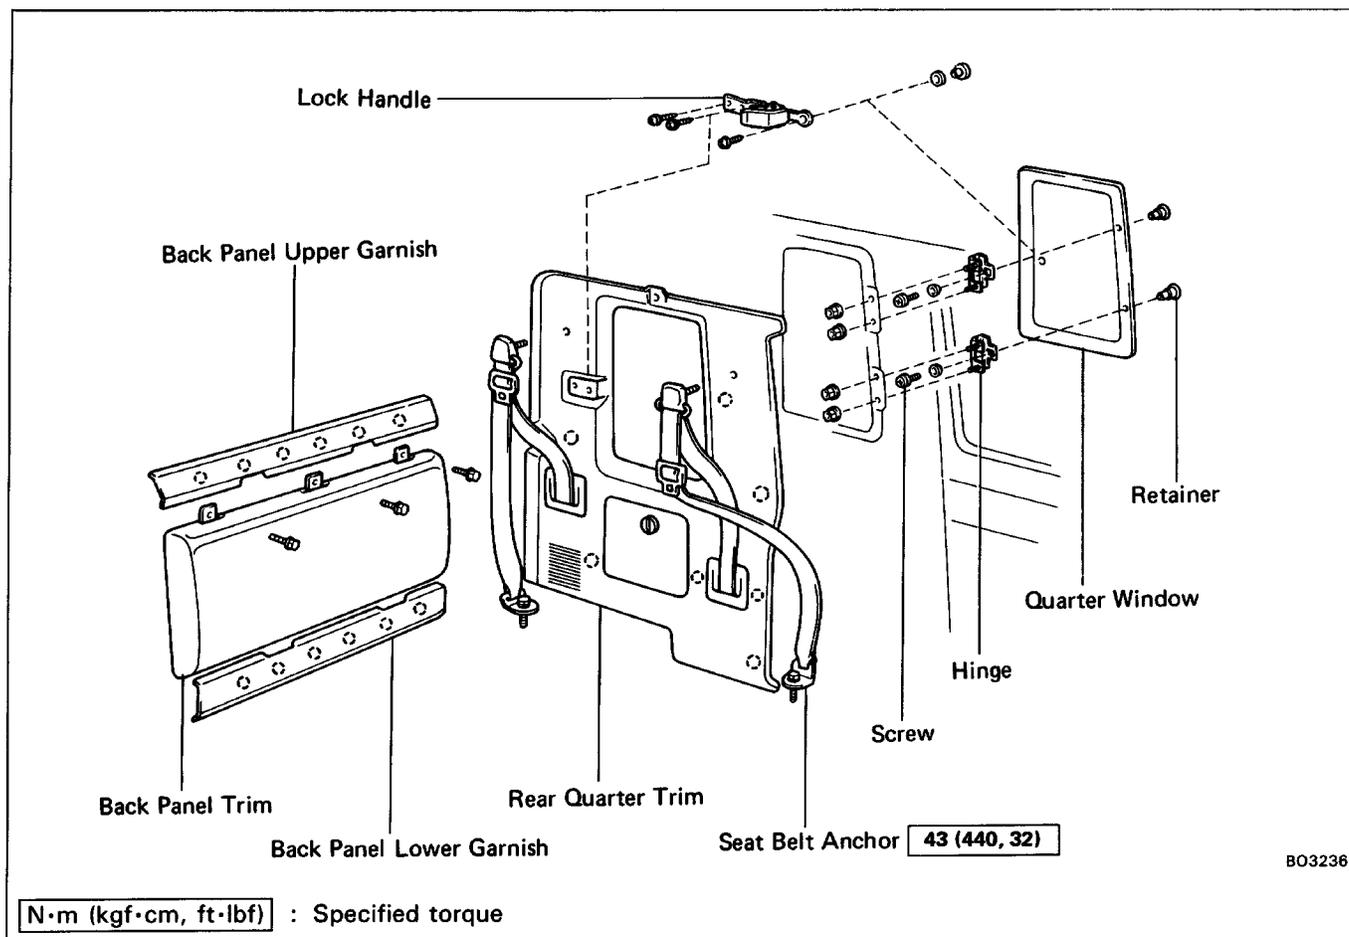

## REMOVAL OF QUARTER WINDOW


### 1. REMOVE BACK PANEL GARNISHES AND BACK PANEL TRIM

- Remove the back panel lower garnish.
- Remove the back panel upper garnish.
- Remove three bolts and the back panel trim.

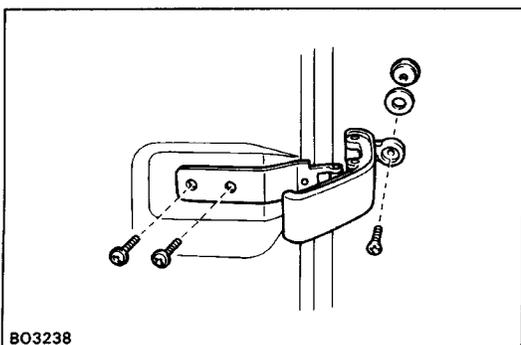

### 2. REMOVE LOCK HANDLE

Remove three screws and the lock handle.

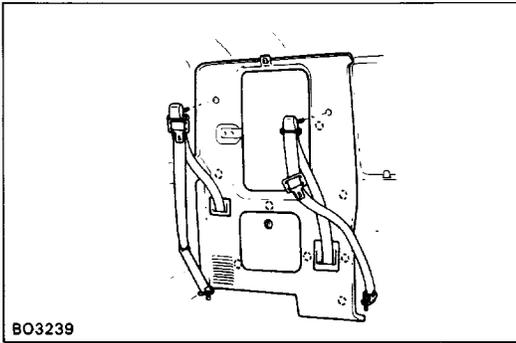


BO3239

### 3. REMOVE REAR QUARTER TRIM

(a) Remove four bolts, the seat belt anchors and the belt guide.

(See pages [BO-46](#) and [47](#))

(b) Remove the screw and the hook.  
 (c) Remove the rear quarter trim.

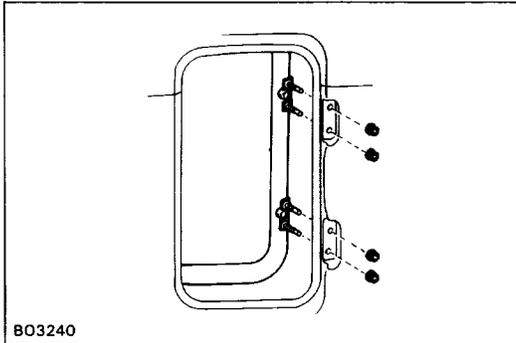


BO3240

### 4. REMOVE QUARTER WINDOW

Remove four nuts and the quarter window.

### 5. REMOVE HINGES FROM WINDOW GLASS

Remove two screws and the hinges.

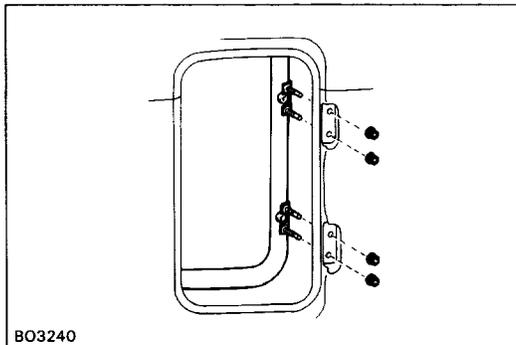

BO3240


## INSTALLATION OF QUARTER WINDOW

### 1. INSTALL HINGES TO WINDOW GLASS

Install the two hinges with the screws.

### 2. INSTALL QUARTER WINDOW

Install the quarter window with four nuts.

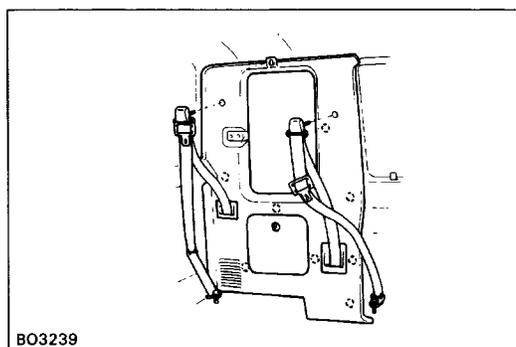

BO3239

### 3. INSTALL REAR QUARTER TRIM


(a) Install the rear quarter trim.

(b) Install the hook with the screw.

(c) Install the seat belt anchor with four bolts.

(See pages [BO-46](#) and [47](#))

**Torque: 43 N-m (440 kgf-cm, 32 ft-lbf)**

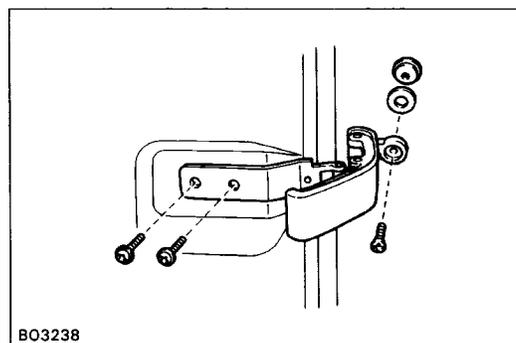

BO3238

### 4. INSTALL LOCK HANDLE

Install the lock handle with three screws.

### 5. INSTALL BACK PANEL TRIM AND BACK PANEL GARNISHES

(a) Install the back panel trim with three bolts.

(b) Install the back panel upper garnish by tapping.

(c) Install the back panel lower garnish.