



Control Relay

INSPECTION OF SOLENOID RELAY

INSPECT SOLENOID RELAY OPERATION

Inspect the relay continuity between terminals.

Terminal Condition	6	1	2	3	5	4
Constant	○—○			○—○	○—○	○—○
Apply battery positive voltage between terminals 1 and '6			○—○		○—○	○—○

If relay operation is not as specified, replace the solenoid relay.