


FUEL PRESSURE REGULATOR

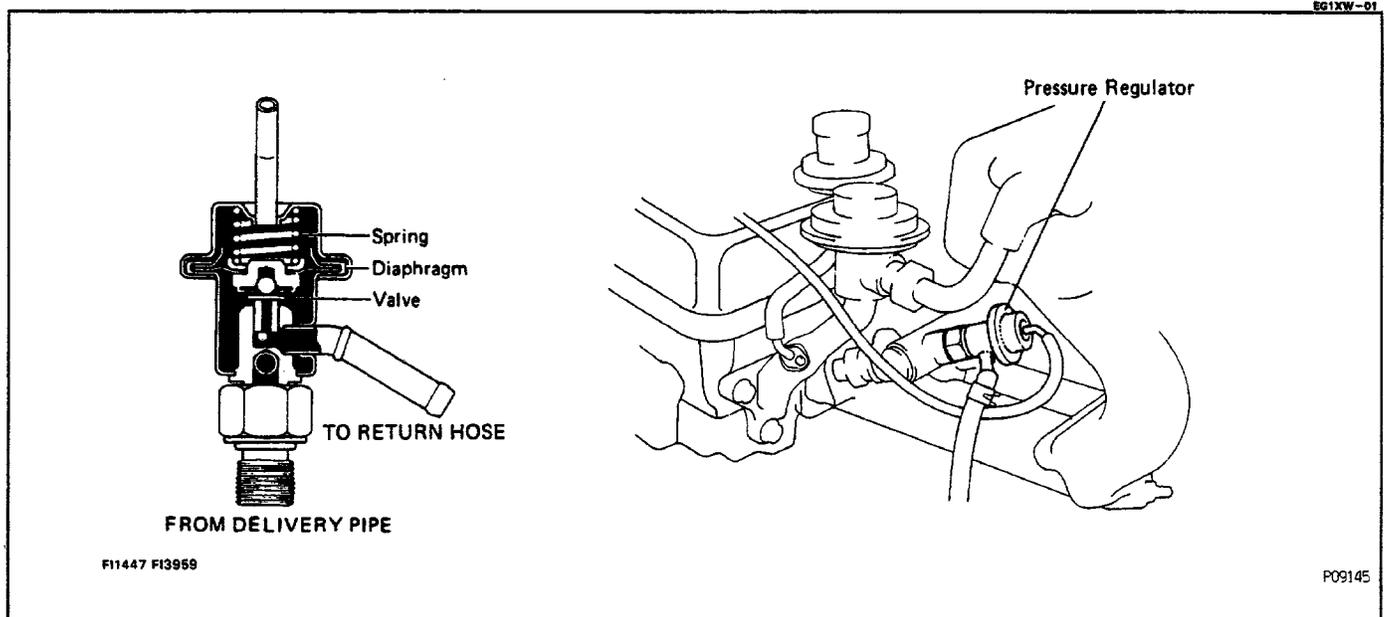

ON-VEHICLE INSPECTION


CHECK FUEL PRESSURE (See page [EG1-178](#))

EG1XK-0

PRESSURE REGULATOR REMOVAL

1. DISCONNECT VACUUM SENSING HOSE
2. REMOVE NO. 1 EGR PIPE

EG1XY-01

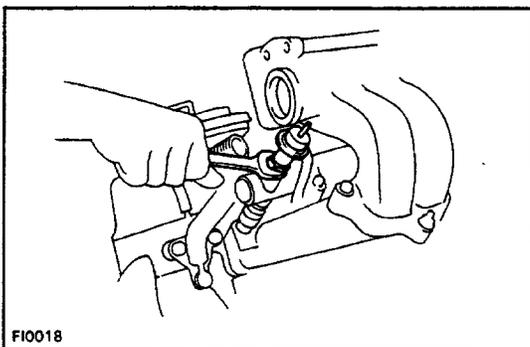

3. DISCONNECT FUEL HOSE

(a) Put a suitable container or shop towel under the pressure regulator.

(b) Disconnect the fuel hose the pressure regulator.

4. REMOVE PRESSURE REGULATOR

Loosen the lock nut, and remove pressure regulator.

PRESSURE REGULATOR INSTALLATION

1. INSTALL PRESSURE REGULATOR

Install the pressure regulator. Torque the lock nut.

Torque: 29 N-m (300 kgf-cm. 22 ft-lbf)

2. CONNECT FUEL HOSE

3. INSTALL NO. 1 EGR PIPE

Install a new gasket and No. 1 EGR pipe.

4. CONNECT VACUUM SENSING HOSE