
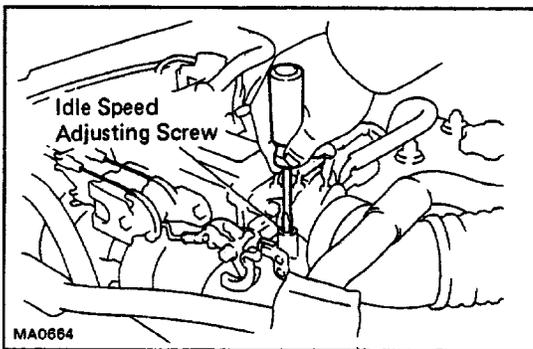


# AUXILIARY AIR VALVE

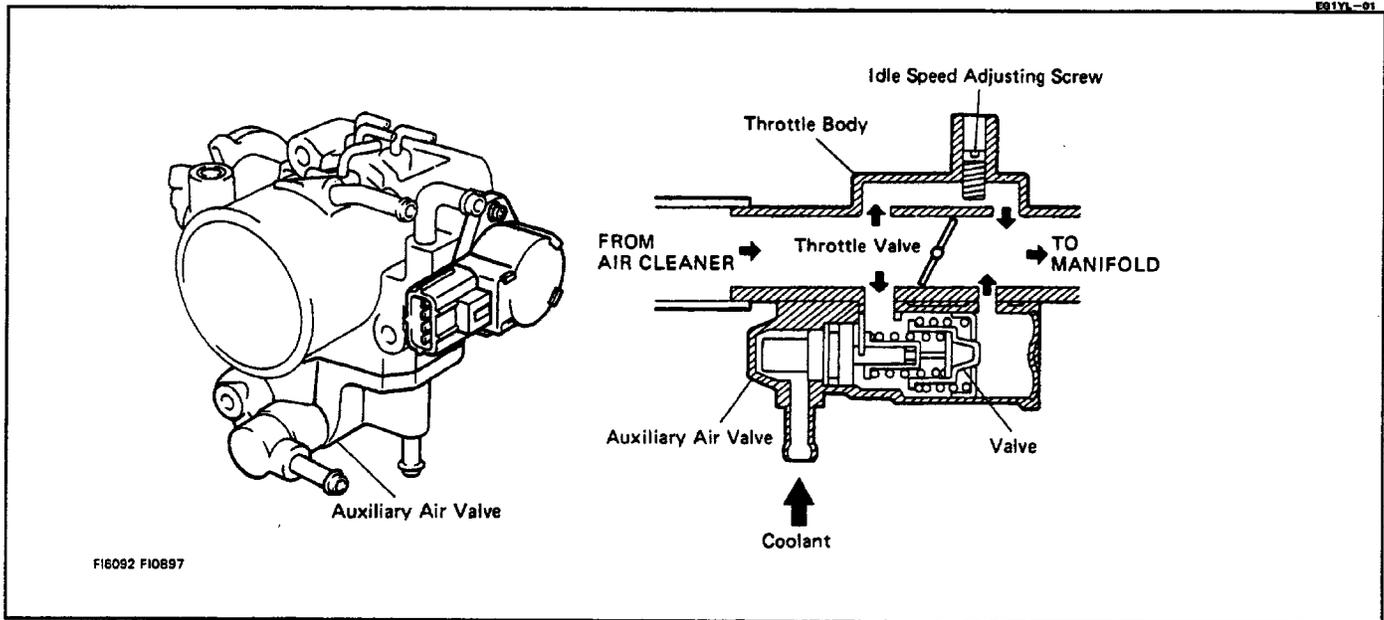

## ON -VEHICLE INSPECTION

EG1YM-02

### CHECK OPERATION OF AUXILIARY AIR VALVE

Check the engine rpm by fully screwing in the idle speed adjusting screw.

At low temp. (Coolant temp.: below 80°C/176°F)

- When the idle speed adjusting screw is in, the engine rpm should drop.
- After warm-up
- When the idle speed adjusting screw is in, the engine rpm should drop below idle speed stop.

## AUXILIARY AIR VALVE REMOVAL

EG1YN-01

1. REMOVE THROTTLE BODY  
(See page [EG1-200](#))
2. REMOVE AUXILIARY AIR VALVE  
(See step 2 on page [EG1-202](#))

## AUXILIARY AIR VALVE INSTALLATION w

1. INSTALL AUXILIARY AIR VALVE  
(See step 2 on page [EG1-202](#))

2. INSTALL THROTTLE BODY  
(See page EG1-202)

ELECTRONIC PARTS LOCATION

