

# OXYGEN SENSOR


## OXYGEN SENSOR INSPECTION

### 1. INSPECT HEATER RESISTANCE OF OXYGEN SENSOR

Using an ohmmeter, measure the resistance between the terminals +B and HT.

**Resistance: 5.1.-6.3 Ω at 20°C (68°F)**

If the resistance is not as specified, replace the oxygen sensor.

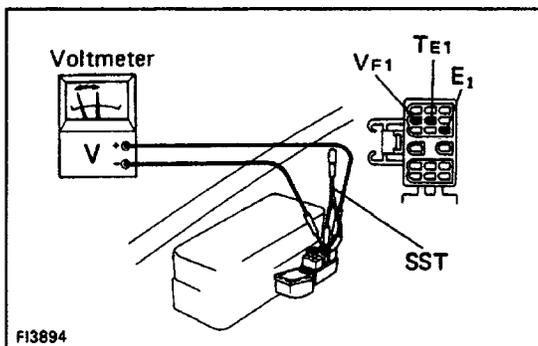


### 2. INSPECTION OF FEEDBACK VOLTAGE (VF1)

(a) Warm up the engine.

(b) Connect the voltmeter to the DLC1 terminals VF, and E1.

HINT: Use SST when connecting between terminals TE1 and E1 of the DLC1.

SST 09843-18020

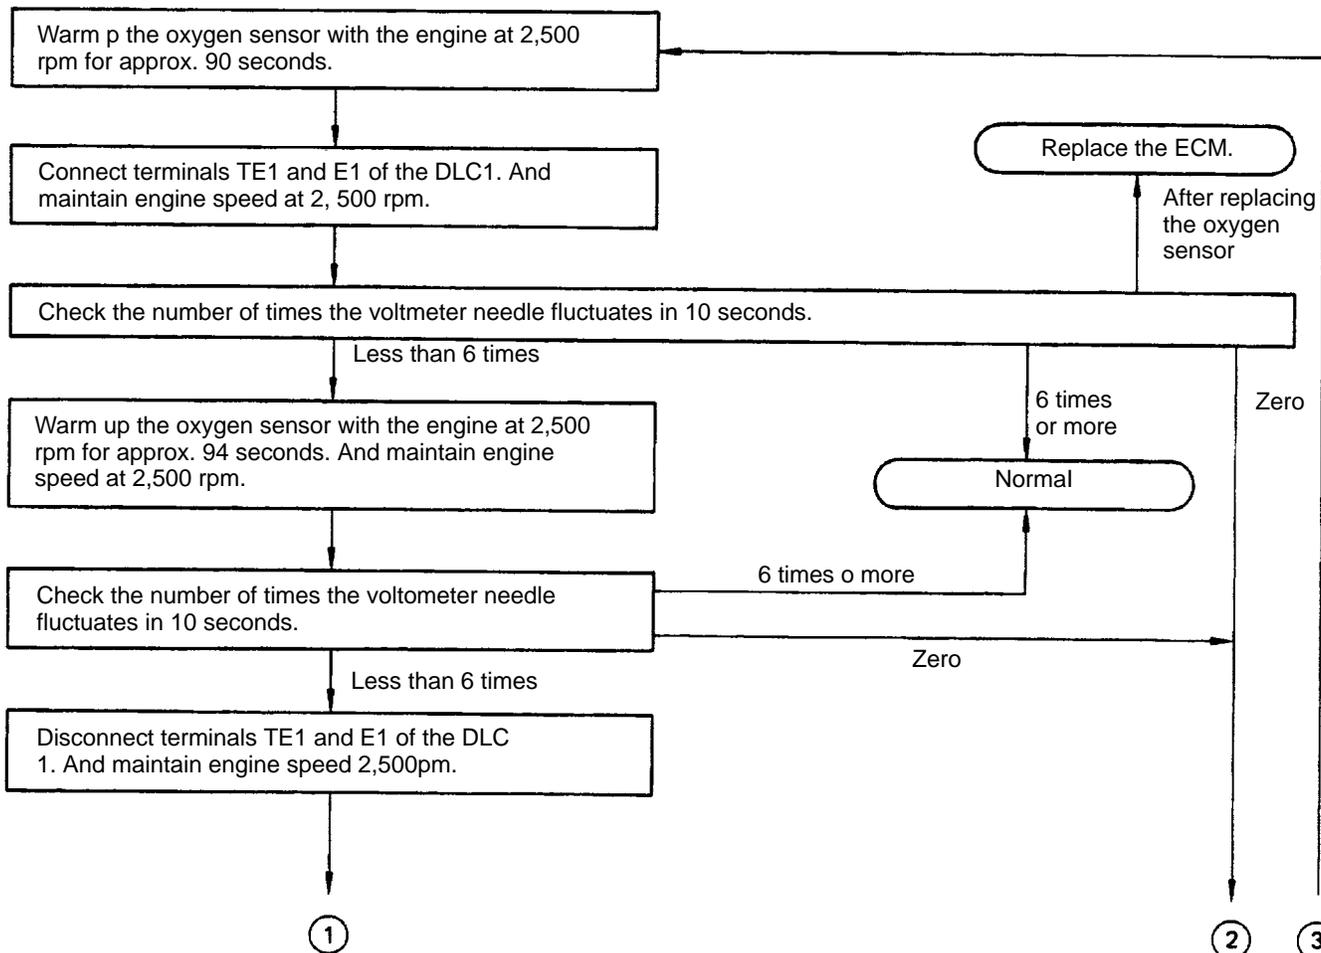

CONTINUED ON PAGE  
EG1-213

CONTINUED FROM PAGE EG1-212

