

## TUNE-UP

EG1UX-01

## ENGINE COOLANT INSPECTION

(See steps 1 and 2 on page [EG1-225](#))

## ENGINE OIL INSPECTION

EG1UY-01

(See steps 1 and 2 on page [EG1-235](#))

## AIR FILTER INSPECTION

EG1UZ-01

(See step 4 on page [MA-7](#))

## BATTERY INSPECTION

EG1V0-02

(See CM section)

## HIGH-TENSION CORD INSPECTION

EG1V1-01

(See page [IG-6](#))

## SPARK PLUGS INSPECTION

EG1V2-01

(See page [IG-8](#))

## DRIVE BELTS INSPECTION

EG1V3-01

(See step 2 on page [MA-6](#))

## VALVE CLEARANCE INSPECTION AND ADJUSTMENT

EG1V4-01

(See step 14 on page [MA-11](#))

## IGNITION TIMING INSPECTION AND ADJUSTMENT

EG1V5-01

(See step 5 on page [IG-10](#))

## IDLE SPEED INSPECTION AND ADJUSTMENT

EG1V6-01

(See step 15 on page [MA-11](#))

HINT: Adjust idle mixture as necessary.