
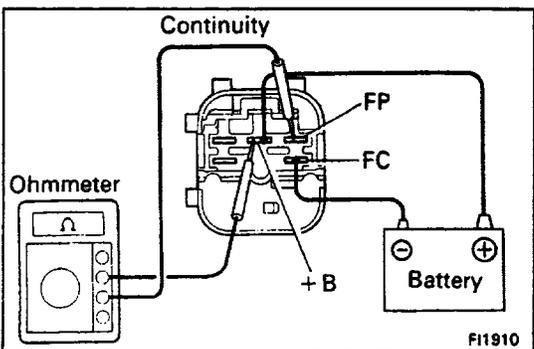
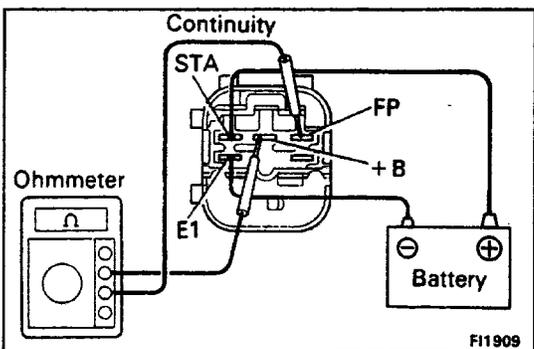
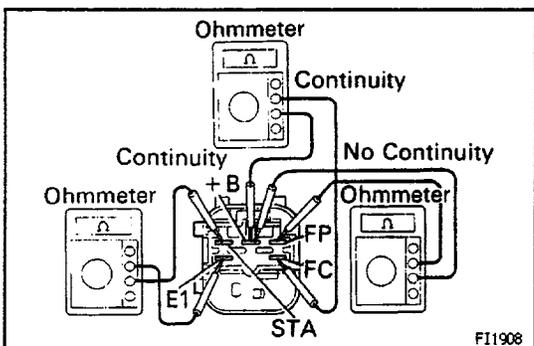


CIRCUIT OPENING RELAY

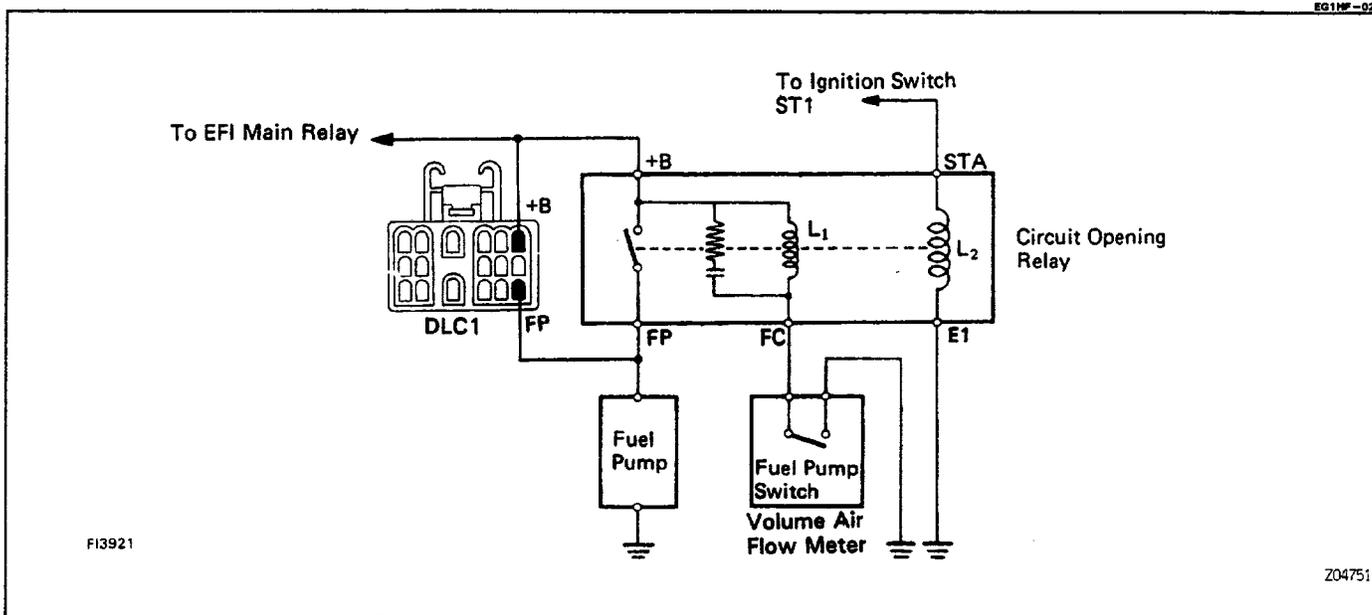

CIRCUIT OPENING RELAY INSPECTION

1. INSPECT RELAY CONTINUITY

- (a) Using an ohmmeter, check that there is continuity between terminals STA and E1.
- (b) Check that there is continuity between terminals +B and FC.
- (c) Check that there is no continuity between terminals +B and FP.

If continuity is not as specified, replace the relay.

2. INSPECT RELAY OPERATION

- (a) Apply battery voltage across terminals STA and E1.
- (b) Using an ohmmeter, check that there is continuity between terminals +B and FP.

- (c) Apply battery voltage across terminals +B and FC.
- (d) Check that there is continuity between terminals +13 and FP.

If operation is not as specified, replace the relay.