
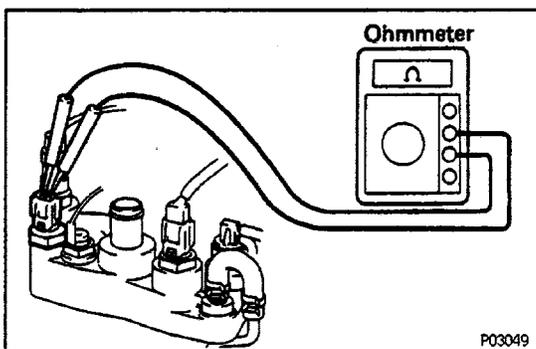


ENGINE COOLANT TEMPERATURE (ECT) SENSOR

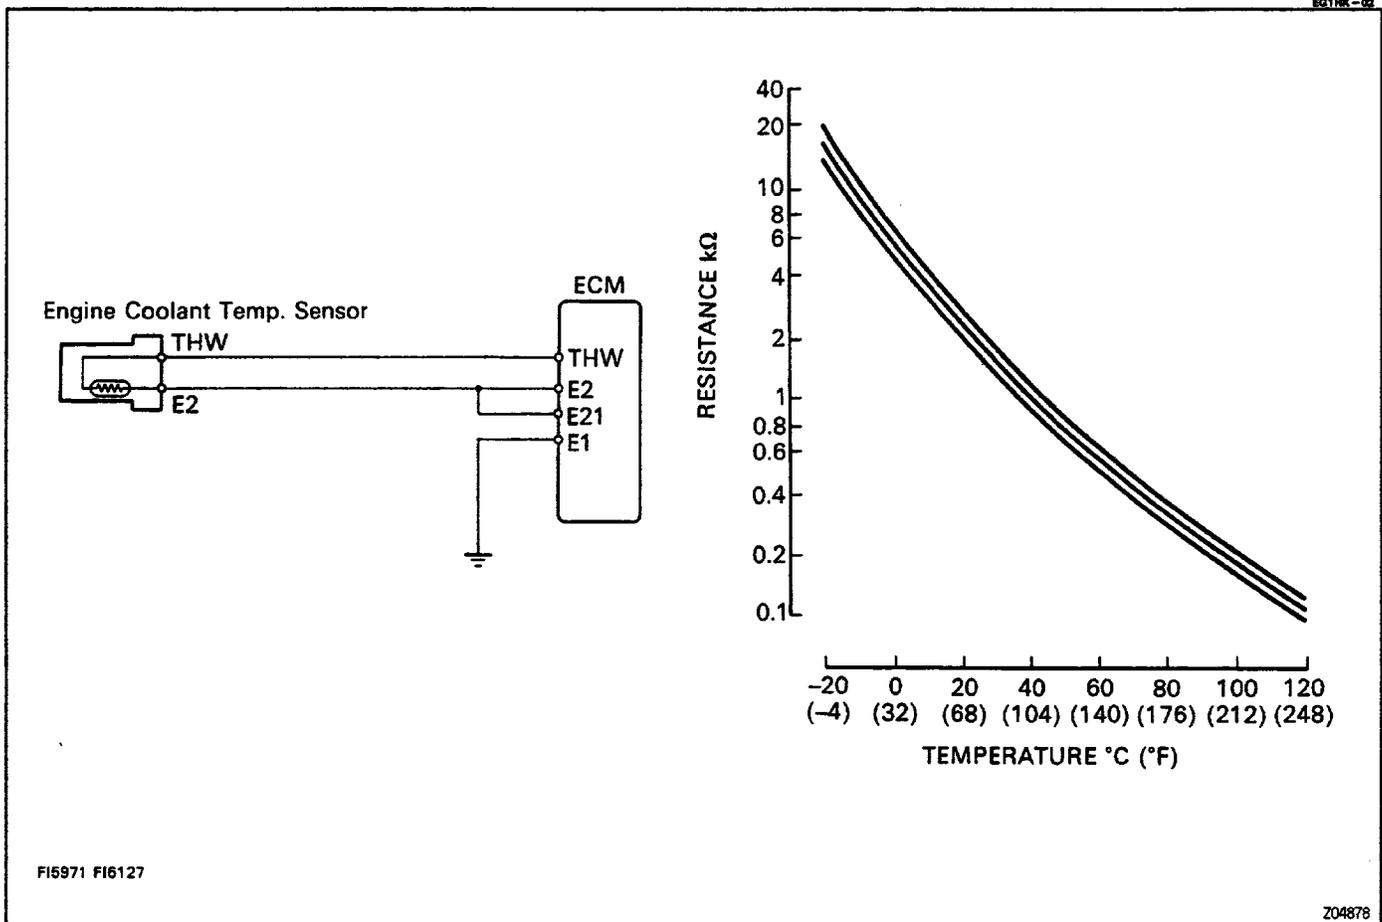

ENGINE COOLANT TEMP. SENSOR INSPECTION

MEASURE RESISTANCE OF ENGINE COOLANT TEMP. SENSOR

- (a) Disconnect the connector.
- (b) Using an ohmmeter, measure the resistance between terminals.

Resistance:

Refer to the chart above.

If the resistance is not as specified, replace the sensor.

- (c) Reconnect the connector.