


FA0138

Strut Bar

(See page [SA-17](#))

REMOVAL OF STRUT BAR

1. PLACE MATCHMARKS ON STRUT BAR

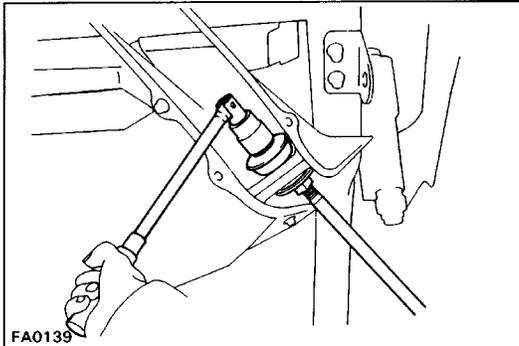


FA0139

2. REMOVE FRONT NUT FROM STRUT BAR

3. REMOVE STRUT BAR FROM LOWER ARM

Remove the nuts holding the strut bar to the lower arm, and remove the strut bar.

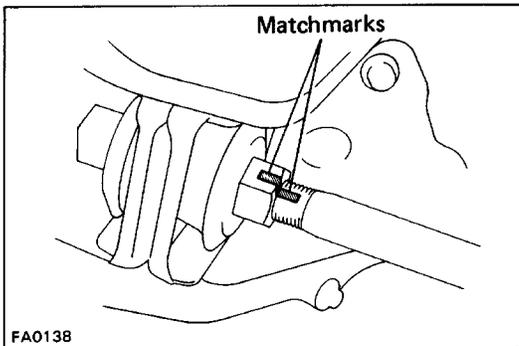


FA0138

INSTALLATION OF STRUT BAR

1. INSTALL FRONT NUT

Install the front nut and align the matchmarks on the strut bar.

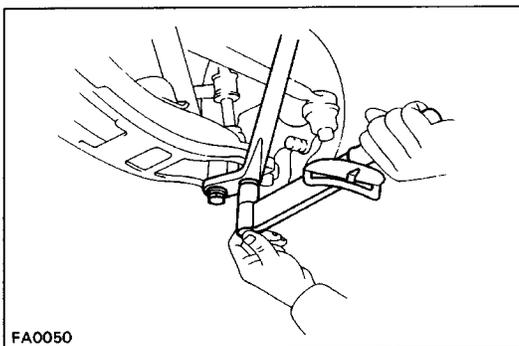

FA0050

2. INSTALL STRUT BAR TO BRACKET


(a) Install the washer and bushing to the strut bar and install it to the bracket.

(b) Install the collar, bushing and washer to the strut bar.

(c) Finger tighten the front nut.

3. CONNECT STRUT BAR TO LOWER ARM

Torque: 95 N-m (970 kgf-cm, 70 ft-lbf)

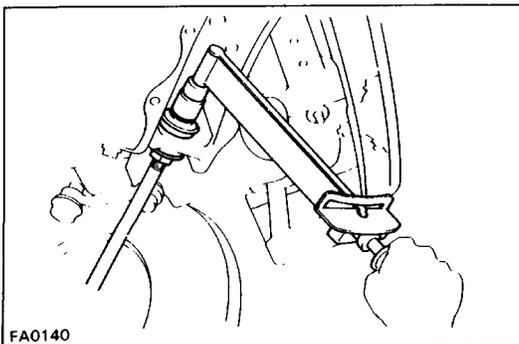

FA0140

4. TORQUE FRONT NUT

(a) Remove the stands and the vehicle to stabilize the suspension.

(b) Torque the front nut.

Torque: 123 N-m (1,250 kgf-cm, 90 ft-lbf)

5. CHECK FRONT WHEEL ALIGNMENT

(See page [SA-3](#))