


## Stabilizer Bar

(See page [SA-17](#))

### REMOVAL OF STABILIZER BAR

#### 1. REMOVE ONE TORSION BAR SPRING


(See page [SA-20](#))

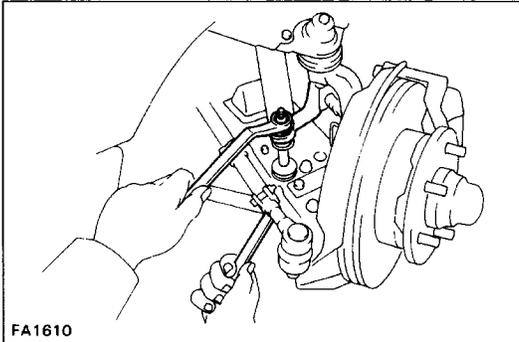

FA1610


#### 2. REMOVE STABILIZER BAR FROM LOWER ARMS

(a) Remove the nuts and cushions holding both sides of the stabilizer bar from the lower arms, and disconnect the stabilizer bar.

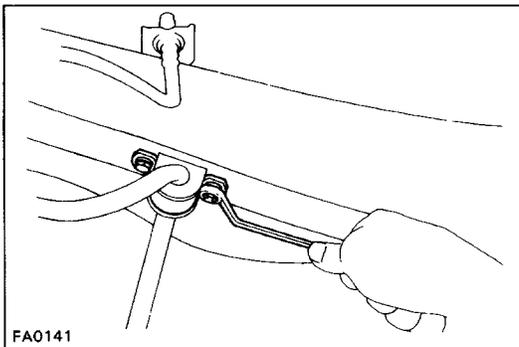

FA0141

(b) Remove both stabilizer bar bushings and brackets, and remove the stabilizer bar.

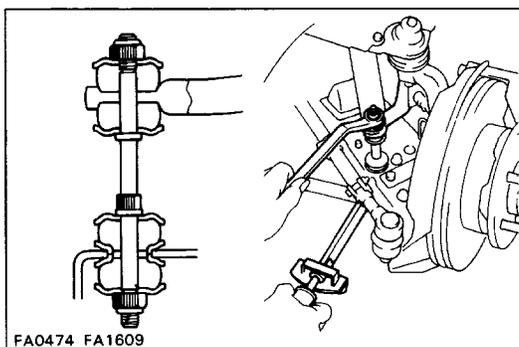

FA0474 FA1609

### INSTALLATION OF STABILIZER BAR

#### 1. PLACE STABILIZER BAR TO FRAME


Place the stabilizer bar in position and install both stabilizer bar bushings and brackets to the frame.

Finger tighten the bolts.

#### 2. CONNECT STABILIZER BAR TO LOWER ARMS

Connect the stabilizer bar on both sides to the lower arms with bolts, cushions and new nuts as shown. Torque the nuts.

Torque: 13 N-m (130 kgf-cm, 9 ft-lbf)

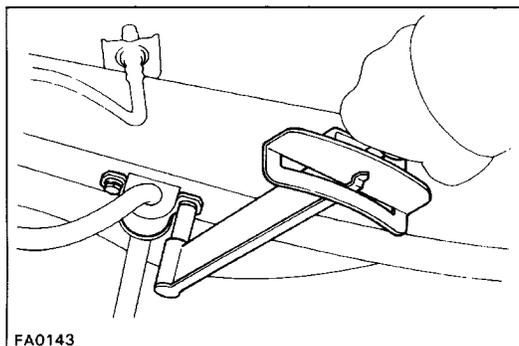

FA0143

#### 3. TORQUE BRACKET SET BOLTS

Torque: 29 N-m (300 kgf-cm, 22 ft-lbf)

#### 4. INSTALL TORSION BAR SPRING

(See page [SA-20](#))