
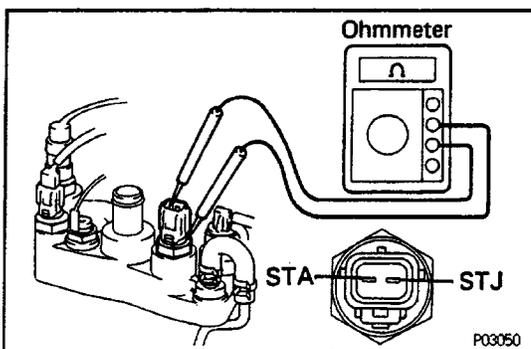


COLD START INJECTOR TIME SWITCH

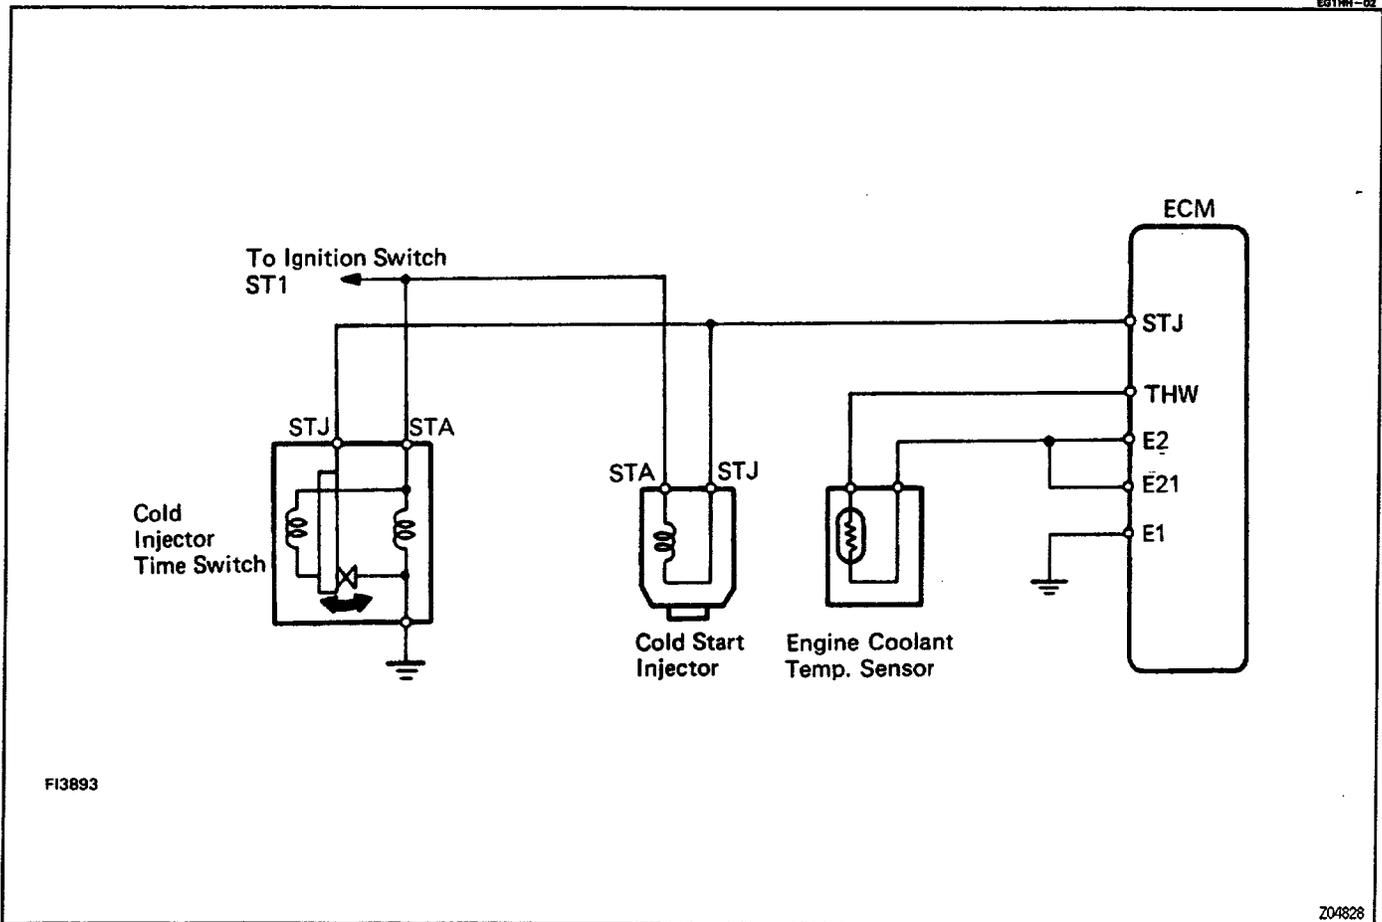

COLD START INJECTOR TIME SWITCH INSPECTION

MEASURE RESISTANCE OF COLD START INJECTOR TIME SWITCH

- (a) Disconnect the connector.
- (b) Using an ohmmeter, measure the resistance between terminals.

Between terminals	Resistance (Ω)	Engine coolant temperature
STA-STJ	30-50	Below 10° C (50° F)
STA-STJ	70-90	Above 25° C (77° F)
STA-Ground	30-90	-

If the resistance is not as specified, replace the switch.

- (c) Reconnect the connector.